

DENON

DVD HOME ENTERTAINMENT SYSTEM


S-102

Owner's Manual


Manuel de l'Utilisateur

Manual del usuario


SAFETY PRECAUTIONS




CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

LASER SAFETY
CLASS II LASER PRODUCT

CAUTION:
VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.
DO NOT STARE INTO BEAM.
LOCATION: INSIDE, NEAR THE DVD DRIVE MECHANISM.

CAUTION:
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT
IN HAZARDOUS RADIATION EXPOSURE.
THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

FCC INFORMATION (For US customers)

- 1. PRODUCT**
This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.
- 2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT**
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.
- 3. NOTE**
This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:


 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the product into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

- Copyrights / Droits d’auteur / Derechos de Autor**
- It is prohibited by law to reproduce, broadcast, rent or play discs in public without the consent of the copyright holder.
 - La reproduction, la diffusion, la location, le prêt ou la lecture publique de ces disques sont interdits sans le consentement du détenteur des droits d’auteur.
 - De acuerdo con las leyes está prohibido reproducir, emitir, alquilar o interpretar discos en público sin la autorización del propietario de los derechos de autor.





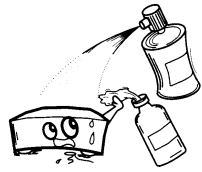
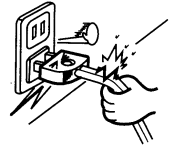


SAFETY INSTRUCTIONS

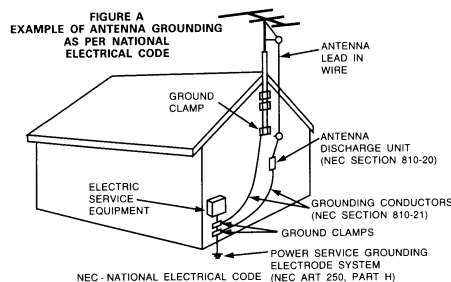1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.



13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
14. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
15. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
16. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
19. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
21. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
22. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
23. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
24. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

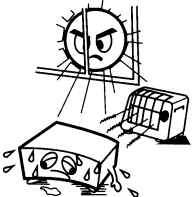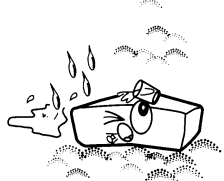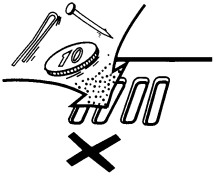NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION

 <ul style="list-style-type: none">• Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.• Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.• Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola.	 <ul style="list-style-type: none">• Keep the unit free from moisture, water, and dust.• Protéger l'appareil contre l'humidité, l'eau et la poussière.• Mantenga el equipo libre de humedad, agua y polvo.	 <ul style="list-style-type: none">• Do not let foreign objects into the unit.• Ne pas laisser des objets étrangers dans l'appareil.• No deje objetos extraños dentro del equipo.
	 <ul style="list-style-type: none">• Unplug the power cord when not using the unit for long periods of time.• Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.• Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.	 <ul style="list-style-type: none">• Do not let insecticides, benzene, and thinner come in contact with the unit.• Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.• No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.
 <ul style="list-style-type: none">• Handle the power cord carefully. Hold the plug when unplugging the cord.• Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.• Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.	 <p>* (For apparatuses with ventilation holes)</p> <ul style="list-style-type: none">• Do not obstruct the ventilation holes.• Ne pas obstruer les trous d'aération.• No obstruya los orificios de ventilación.	 <ul style="list-style-type: none">• Never disassemble or modify the unit in any way.• Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.• Nunca desarme o modifique el equipo de ninguna manera.

Contents

Getting Started

Accessories	2
Cautions on Handling	2
System Configuration	2
Cautions on Installation	3
Other Cautions	3
Discs	4
Discs usable on the S-102	4
Holding Discs	4
Loading Discs	4
Cautions on Loading Discs	5
Cautions on Handling	5
Cautions on Storing Discs	5
Cleaning Discs	5
About the Remote Control Unit	5
Inserting the Batteries	5
Operating Range of the Remote Control Unit	5
Part Names and Functions	6
Front Panel	6
Display	6
Rear Panel	7
Bottom Panel (Subwoofer)	7
Remote Control Unit	8

Connections

Preparations	9
Cables Used for Connections	9
Connecting the System	10
Connecting the Monitor	11
Connecting Equipment with HDMI connectors	11, 12
Connecting the Playback Components	12
Control Dock for iPod	12
TV Tuner	12
Satellite Receiver	12
Connections to Other Devices	13
Antenna Terminals	13
Once Connections are Completed	13

Menu Operations

Operations	14
Example of Display of Default Values	14
Menu Map	14

Setup

LANGUAGE SETUP	15
1 OSD LANGUAGE	15
2 DIALOG	15
3 SUBTITLE	15
4 DISC MENU	15
VIDEO SETUP	16
1 HDMI SETUP	16
2 TV ASPECT	16
3 TV TYPE	16
4 PROGRESSIVE MODE	16
5 SQUEEZE MODE	16
AUDIO SETUP	17
1 SPEAKER SETUP	17
2 INPUT MODE	17
RATINGS	18
1 RATING LEVEL	18
2 PASSWORD	18
OTHER SETUP	18
1 CAPTIONS	18
2 WALL PAPER	18
3 DISPLAY	18
4 SLIDE SHOW	18
5 AUTO POWER MODE	18
6 SCREEN SAVER	18
TIMER SETUP	19
1 ONCE TIMER	19
2 EVERY TIMER	19
3 CLOCK SETUP	19

Playback

Preparations	20
Turning the Power On	20
Loading Discs	20
Input source switching	20
Adjusting the Master Volume	20
Playing a DVD/Music CD Disc	21
Using the Top Menu/DVD Menu (DVD Video)	21
Switching the Audio Language, Subtitle Language and Angle (DVD Video)	22
Using the Playback Control Function (DVD Video)	22
Playing Frame by Frame (DVD Video)	22
Slow Playback (DVD Video)	22
Playing in the Zoom Mode (DVD Video)	22
Playing Repeatedly <Repeat playback> (DVD Video/Music CD)	23
Playing Tracks in the Desired Order <Program> (Music CD)	23
Playing Random Order <Random playback> (Music CD)	23
Playing Music Files	23
Before Playing MP3 or WMA Files	23
Creating MP3 and WMA Files Compatible with the S-102	23
Playing MP3 or WMA Files	23, 24
Playing Still Picture Files (JPEG format)	24
Creating JPEG Files Compatible on the S-102	24
Playing JPEG Files	25
Playing Picture CD/Fujicolor CD	25
Enjoying Surround Sound	25
Set the Input Mode	25
Selecting Surround Mode	26
Set the Surround Parameter	26
Playing Dolby Digital/DTS Multi-Channel Sources (Digital input only)	27
Playing Dolby Digital/PCM/Analog 2-Channel Sources	27
Listening in the Dolby Headphone Mode	27
Listening to Radio Broadcasts	27, 28
Tuning in Broadcast Stations	27, 28
Naming the Currently Tuned in Broadcast Station and Presetting it	28
Automatically Presetting FM Stations (Auto preset)	28
Listening to Preset Stations	28
iPod® Playback	29
Listening to Music	29
Viewing Still Pictures (Only for iPods Equipped with the Photo Function)	29
Disconnecting the iPod	29
Playing a Portable Audio	29

Advanced Operation

On-Screen Display	30
Using the Disc Information Screen (DVD Video/Music CD)	30
Using the Multi-Function Screen (DVD Video)	30
Setting the Sleep Timer	31
Other Functions	31
Adjusting the Tone	31
Turning the Sound Off Temporarily (Muting)	31
Convenient Functions	31
Personal Memory Plus Function	31
Last Function Memory	31
Backup Memory	31
Auto Power On	31
Resetting the Microprocessor	31

Remote Control Unit Operations

Setting the preset memory function	32
Operating a component stored in the preset memory	32
Setting the punch through function	32, 33

Other Information 34 ~ 36

Troubleshooting 37 ~ 39

Specifications 40

List of preset codes End of this manual

Getting Started


Thank you for purchasing this DENON product. To ensure proper operation, please read these owner's manual carefully before using the product.

After reading them, be sure to keep them for future reference.

Accessories

Check that the following parts are supplied with the product.

① Remote control (RC-1073)	1
② R6P/AA batteries	2
③ System cable (D-SUB25P) (Cord length: Approx. 10 ft/3 m)	1
④ Speaker cable (Cord length: Approx. 16 ft/5 m)	2
⑤ Video cable (Cord length: Approx. 5 ft/1.5 m)	1
⑥ AM loop antenna	1
⑦ FM indoor antenna	1
⑧ Speaker stand	2
⑨ Screw	4
⑩ Hex wrench	1
⑪ Anti slip pads	4
⑫ Owner's manual (with Quick setup sheet)	1
⑬ Service station list	1
⑭ Warranty (for North America model only)	1

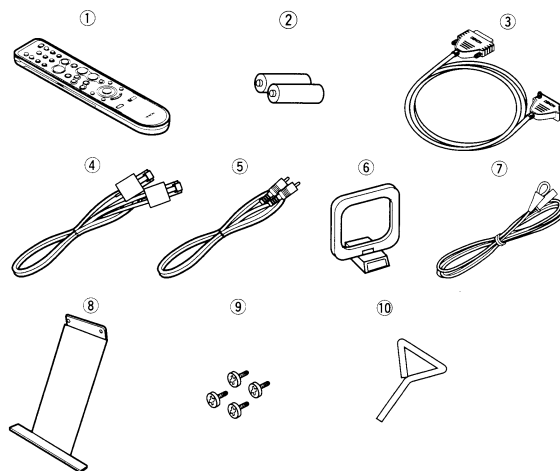

Cautions on Handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

• Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• Sufficiently ventilate the place of installation

If the unit is left in a room full of the smoke from cigarettes, etc., for long periods of time, the surface of the optical pickup could get dirty, in which case it will not be able to read the signals properly.

• About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.


• Moving the unit

Turn off the power and unplug the power cord from the power outlet.

Next, disconnect the connection cables to other system units before moving the unit.

• Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.



System Configuration

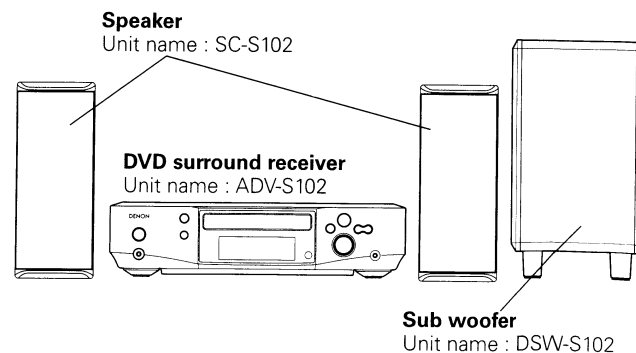

Cautions on Installation

Note:

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

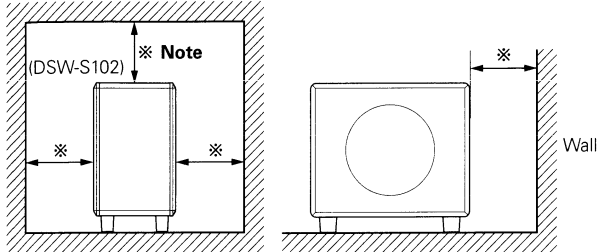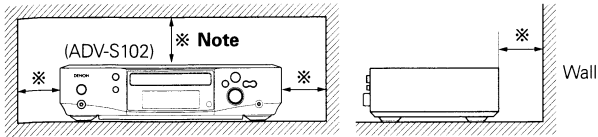

© The quality of the sound produced from the speaker is affected by the size and type of the room, as well as by the method of installation. Consider the points listed below before installing the speaker.

- Placing speakers on the same stand or shelf as the record player could result in howling.
- If there is a wall, glass door, etc., behind or to the sides of the speakers, resonance and reflections can be prevented by using a thick curtain, etc.
- The speakers are of the shielded type. With some TVs, however, placing the speakers near the TV could cause color blotching on the TV's picture. If this happens, turn the TV's power off, move it away, wait 15 to 30 minutes, then turn the TV's power back on. If the color blotching persists, move the speakers further away.
- Mount on a wall sufficiently sturdy to bear the weight of the speaker. Note that DENON will except no responsibility whatsoever for damages or accidents caused by the speaker falling.
- To ensure safety, have a specialist install the speakers on the wall.
- Be sure to fasten the speaker connection cables to the wall, etc., so that you do not get your feet or hands caught in them, causing the set to fall.
- Place the subwoofer on a flat floor to prevent accidents due to the subwoofer tipping over.
- Do not place a record player, CD player or other such device on top of the subwoofer.
- Do not set the subwoofer with the baffle surface against the floor. Doing so will prevent you from achieving satisfactory sound effects.

CAUTION

- Be sure to fasten the speaker cords to a wall, etc., to prevent people from tripping over them or otherwise pulling on them accidentally, causing the speaker systems to fall.
- Be sure to check for safety after installing the speaker systems. Afterwards, perform safety inspections at regular intervals to be sure there is no danger that the speaker systems will fall. DENON will accept no responsibility for damages or accidents caused by inappropriate choice of the place of installation or improper installation procedures.



Other Cautions









 


- Switching the input function when input terminals are not connected.
A clicking noise may be produced if the input function is switched when nothing is connected to the input terminals. If this happens, either turn down the VOLUME control knob or connect components to the input terminals.
- When watching TV broadcasts with the S-102's power turned on, depending on the conditions of the TV broadcast's signals, striped patterns may appear on the picture. This is not a malfunction of the S-102 or the TV. Turn the S-102's power off when watching TV.
- Note that if a magnet or a piece of furniture or equipment using magnets is placed nearby, interaction with the S-102 could result in color blotching on the TV.

NOTE

- This product uses a semiconductor laser. To ensure stable operation, it is recommended to use the product indoors at a temperature of 5 °C (41 °F) ~ 35 °C (95 °F).

Discs

Discs usable on the S-102

Usable discs	Mark (logo)	Recorded Signals	Disc size
DVD video		Digital audio + digital video (MPEG2)	12cm
DVD-R/DVD+R (*1) (*2)	 		
DVD-RW/DVD+RW (*1) (*3)	 		
CD		Digital audio MP3 Digital picture (JPEG)	12cm / 8cm
CD-R (*4)			
CD-RW (*4)			
Picture CD		Digital picture (JPEG)	12cm
Fujicolor CD		Digital picture (JPEG)	12cm
WMA		Digital audio	12cm

*1 : DVD ± R/DVD ±RW discs recorded on a DVD recorder in the video mode and finalized can be played on the S-102.

Note, however, that in some cases the discs may not play properly, depending on their recording conditions.

Discs that have not been finalized or DVD ± R/DVD ±RW discs recorded in the VR mode or in CPRM cannot be played.

*2 : DVD+R DL (Dual Layer) cannot be played.

*3 : DVD-RW discs recorded in the VR mode and finalized can be played.

*4 : According to recording quality, some CD-R/RW cannot be played.

CD-R/CD-RW discs recorded and finalized can be played on the S-102.



The following types of discs cannot be played on the S-102:

- DVD videos with region numbers other than "1" or "ALL"
- DVD-ROM/RAM (For DVD ROM discs)
- CD-ROMs (Only JPEG / MP3 / WMA)
- VCD / VSDs / CVD / SVCD
- CDV (only the audio portion can be played)
- CD-Gs (only the audio portion can be played)
- Photo CDs (NEVER play such discs on the S-102)

NOTE

DVD players and DVD video discs have region numbers (numbers assigned for different regions of the world).

The numbers must match or the discs cannot be played.

The Region number for this DVD video player is **1**.

NOTE

• Recordings you have made should only be used for your personal enjoyment, and as per copyright laws may not be used in other ways without permission of the copyright holder.

• Do not play CD-R/CD-RW discs containing files in formats other than music CD (CD-DA format), MP3, WMA, JPEG. Depending on the type of file, the set may malfunction or be damaged.

Holding Discs



Do not touch the signal surface.

Loading Discs

- Set the disc with the labeled side facing up.
- Make sure the disc tray is fully open when inserting the disc.
- Place the discs flatly, 12 cm discs in the outer tray guide (Figure 1), 8 cm discs in the inner tray guide (Figure 2).

Figure 1


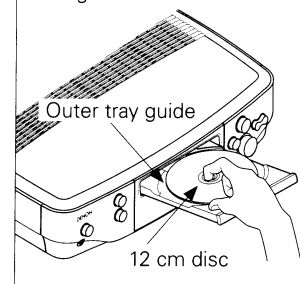


Figure 2



- Place 8 cm discs in the inner tray guide without using an adapter.

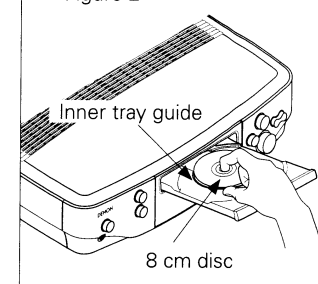

- "STOP" is displayed if a disc that cannot be played is loaded.
- "0h00m00s" is displayed if the disc is loaded upside-down or if no disc is loaded.

NOTE

Do not push the disc tray in by hand when the power is turned off. Doing so could damage the set.



※ Playing discs with special shapes could damage the set. Do not use such discs.

Cautions on Loading Discs

- Only load one disc at a time. Loading two or more discs can damage the unit or scratch the discs.
- Do not use cracked or warped discs or discs that have been repaired with adhesive, etc.
- Do not use discs on which the sticky part of cellophane tape or labels is exposed or on which there are traces of where labels have been removed. Such discs can get caught inside the player and damage it.

Cautions on Handling


- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole at the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hairdryer, etc.

Cautions on Storing Discs


- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
 1. Places exposed to direct sunlight for long periods of time
 2. Dusty or humid places
 3. Places exposed to heat from heating appliances, etc.

Cleaning Discs

- If there are fingerprints or dirt on discs, wipe them off before using the disc. Fingerprints and dirt can impair sound quality and cause interruptions in playback.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.

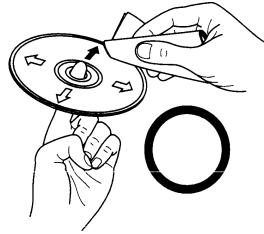

Gently wipe the disc from the inside towards the outside.

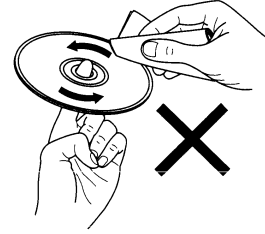

Do not wipe with a circular motion.



NOTE

Do not use record spray, antistatic agents, or benzene, thinner or other solvents.

About the Remote Control Unit

Inserting the Batteries

- ① Slide the rear lid in the direction of the arrow and remove it.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

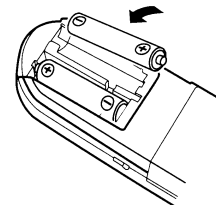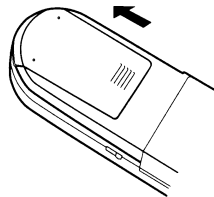


- ③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the “+” and “-” marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

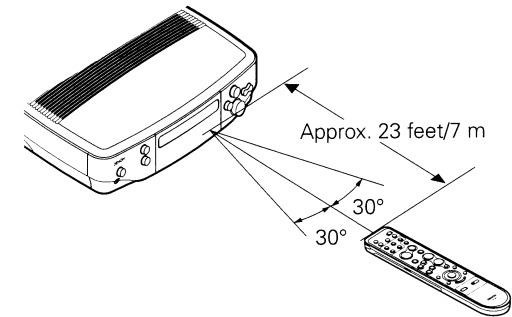


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Part Names and Functions


For buttons not explained here, see the page indicated in parentheses ().

Front Panel

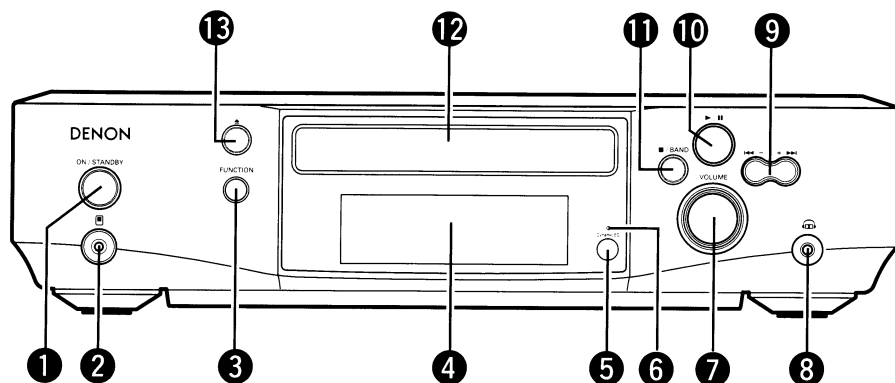


- | | |
|--|--|
| 1 Power operation button (ON/STANDBY) (20) | 8 Headphones jack (27) |
| 2 Portable jack (20) | 9 Skip buttons (I◀◀, ▶▶I) (21) |
| 3 FUNCTION button (20) | 10 Tuning/Preset buttons (+, -) (27) |
| 4 Display | 11 Play/Pause button (▶ II) (21) |
| 5 Remote control sensor (5) | 12 Stop/band button (■ BAND) (21) |
| 6 Audyssey Dynamic EQ indicator (36) | 13 Disc tray (4) |
| 7 VOLUME control knob (20) | 14 Disc tray open/close button (▲) (4) |

Display

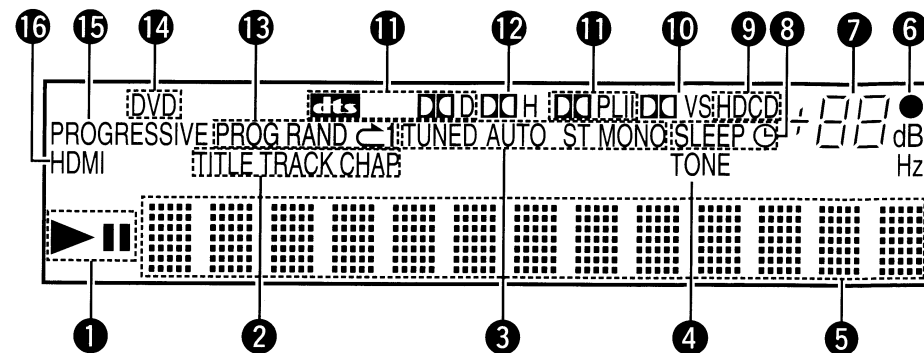


- | | |
|--|--|
| 1 ▶ (the play indicator) lights when a disc is playing, and II (the pause mode) is set. | 8 Timer indicator (19) |
| 2 Disc section indicator (21) | 9 HDCD indicator (36) |
| 3 Reception mode indicator (27) | 10 Dolby Virtual Speaker mode indicator (27) |
| 4 Tone indicator (31) | 11 Input signal indicators (27) |
| 5 Information display
Various information is displayed here, depending on the operation mode. | 12 Dolby Headphone mode indicator (27) |
| 6 Remote control signal reception indicator (5) | 13 Play mode indicator (23) |
| 7 Master volume indicator (20) | 14 Disc indicator (4) |
| | 15 Progressive output indicator (11) |
| | 16 HDMI output indicator (11) |

Rear Panel

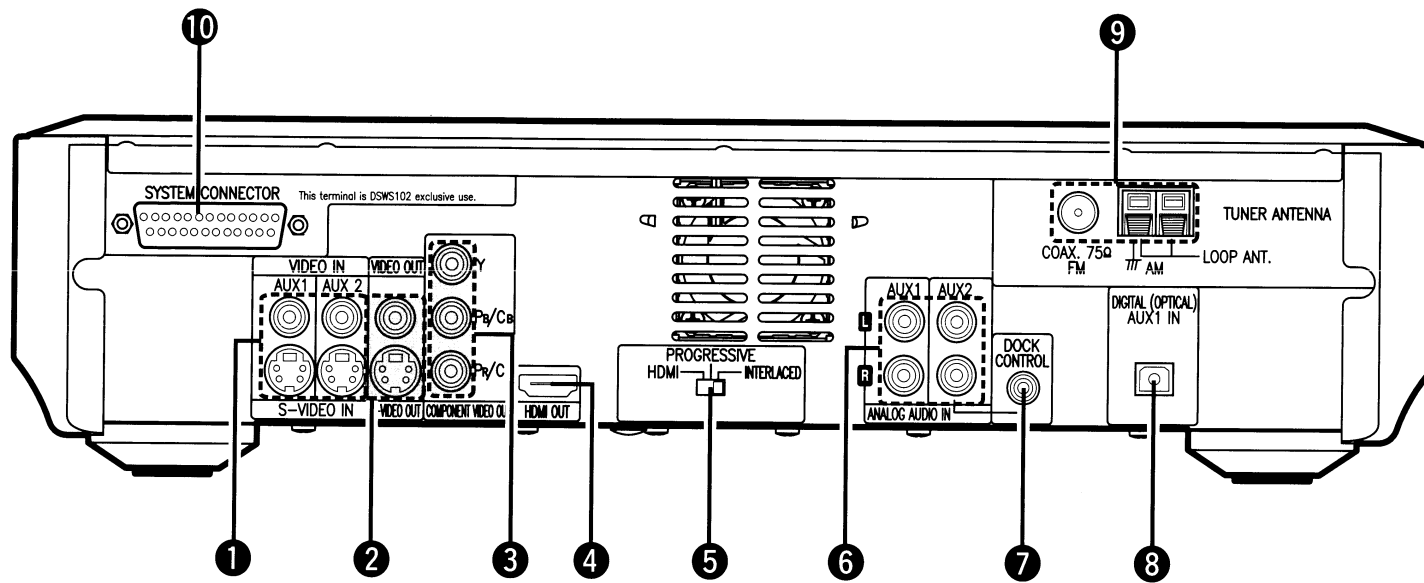

Bottom Panel (Subwoofer)

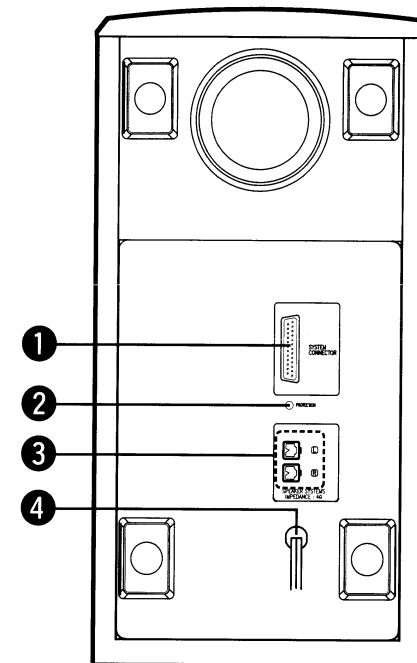

- 1 SYSTEM CONNECTOR (10)
- 2 PROTECTION indicator (10)
- 3 SPEAKER SYSTEMS connector (10)
- 4 Power cord (10)

Connections

Setup

Playback


Remote Control

Information

Troubleshooting

Remote Control Unit


Front

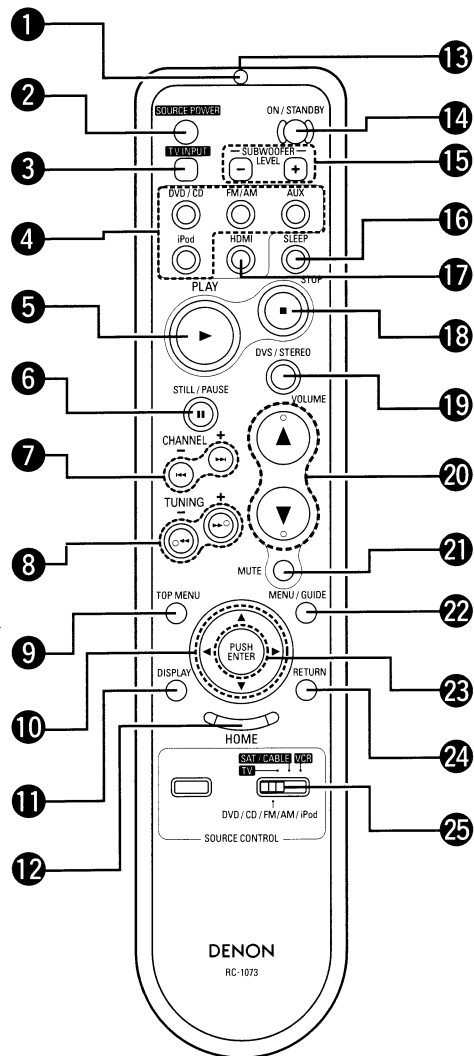

- 1 Signal transmission indicator (32)
- 2 External device power button (33)
- 3 TV input selector button (32)
- 4 Function button (20)
- 5 PLAY (▶) button (21)
- 6 STILL/PAUSE (⏏) button (21)
- 7 SKIP (◀◀, ▶▶) buttons (21)
- 8 SEARCH (◀◀, ▶▶) buttons (21)
- 9 TUNING +, - buttons (27, 28)
- 10 TOP MENU button (21)
- 11 Cursor buttons (Δ ▽ ◀ ▶) (14)
- 12 DISPLAY button (30)
- 13 HOME button (14)
- 14 Remote control signal transmitter (5)
- 15 ON/STANDBY button (20)
- 16 SUB WOOFER LEVEL button (21)
- Adjust the subwoofer volume level.
- 17 SLEEP button (31)
- 18 HDMI button (12)
- 19 STOP (■) button (21)
- 20 Dolby virtual speaker/STEREO button (26)
- 21 Master volume control buttons (VOLUME) (20)
- 22 Muting button (MUTE) (31)
- 23 MENU/GUIDE button (21)
- 24 ENTER button (14)
- 25 RETURN button (14)
- 26 SOURCE CONTROL switch (32)

※ To operate the S-102, set to the "DVD / CD / FM/AM / iPod" position.

Rear

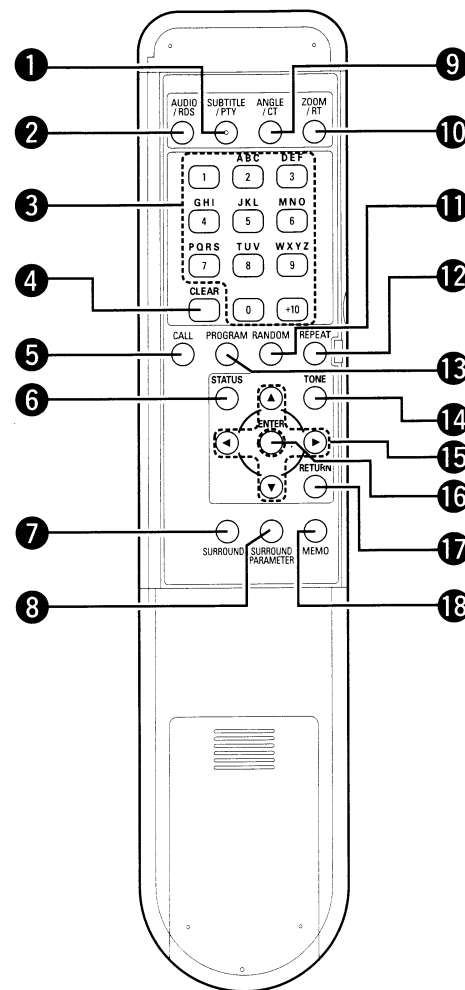

- 1 SUBTITLE/PTY button (22)
- 2 AUDIO/RDS button (22)
- 3 Character/Number (21)
- 4 CLEAR button (23)
- 5 CALL button (23)
- 6 STATUS button (19)
- 7 SURROUND button (26)
- 8 SURROUND PARAMETER button (27)
- 9 ANGLE/CT button (22)
- 10 ZOOM/RT button (22)
- 11 RANDOM button (23)
- 12 REPEAT button (23)
- 13 PROGRAM button (23)
- 14 TONE button (31)
- 15 Cursor buttons (Δ ▽ ◀ ▶) (14)
- 16 ENTER button (14)
- 17 RETURN button (14)
- 18 MEMO button (28)

NOTE

If buttons on the front or rear are pressed strongly, the button on the opposite side will be activated too.

Connections

Connections for all compatible audio and video signal formats are described in these operating instructions. Please select the types of connections suited for the equipment you are connecting. With some types of connections, certain settings must be made on the S-102. For details, refer to the instructions for the respective connection items below.

NOTE

- Do not plug in the power supply cord until all connections have been completed.
- When making connections, also refer to the owner's manual of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power supply cords together with connection cables. Doing so can result in humming or noise.

To change the speaker cable

Refer to the procedure below if you want to switch to a different speaker cable. This example describes how to mount the "+" side cable to the connector. Mount the "-" side cable in the same way.

1 Insert the included hexagonal wrench into the hole at the top of the connector's "+" side. (Arrow A)

2 Turn the hexagonal wrench in the direction of arrow B to loosen the cable.


3 Pull out the old cable. (Arrow C)

※ Be careful not to leave any broken wire parts inside the connector.

4 Peel off the cable's sheath and insert the new cable. (Arrow D)

5 Turn the hexagonal wrench in the direction of Arrow E and tighten securely so that the cable cannot be pulled out.



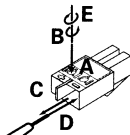













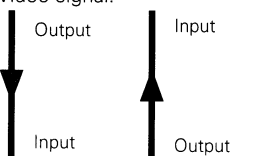
※ If the polarities are inverted, the phase may be off and the bass sound may be missing, resulting in an unnatural sound.



Preparations


Cables Used for Connections

Select the cables according to the equipment being connected.

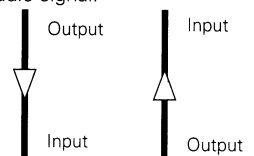Audio cables		Video cables	
Optical digital connections  Optical transmission cable		Component video connections (Green)   (Y) (Blue)   (PB/CB) (Red)   (PR/CR) Component video cable	
Analog connections (stereo) (White)   (Red)   Stereo pin-plug cable		S-Video connections  S-Video cable	
		Video connections (Yellow)   75Ω / ohms pin-plug video cable	
Signal direction		Audio and video cables	
Audio signal:  Input Output		HDMI connections  19-pin HDMI cable	
Video signal:  Input Output			

Connecting the System

A home theater can be achieved easily using the included cables to connect the DVD surround receiver (ADV-S102), subwoofer (DSW-S102), speakers (SC-S102) and your TV set.

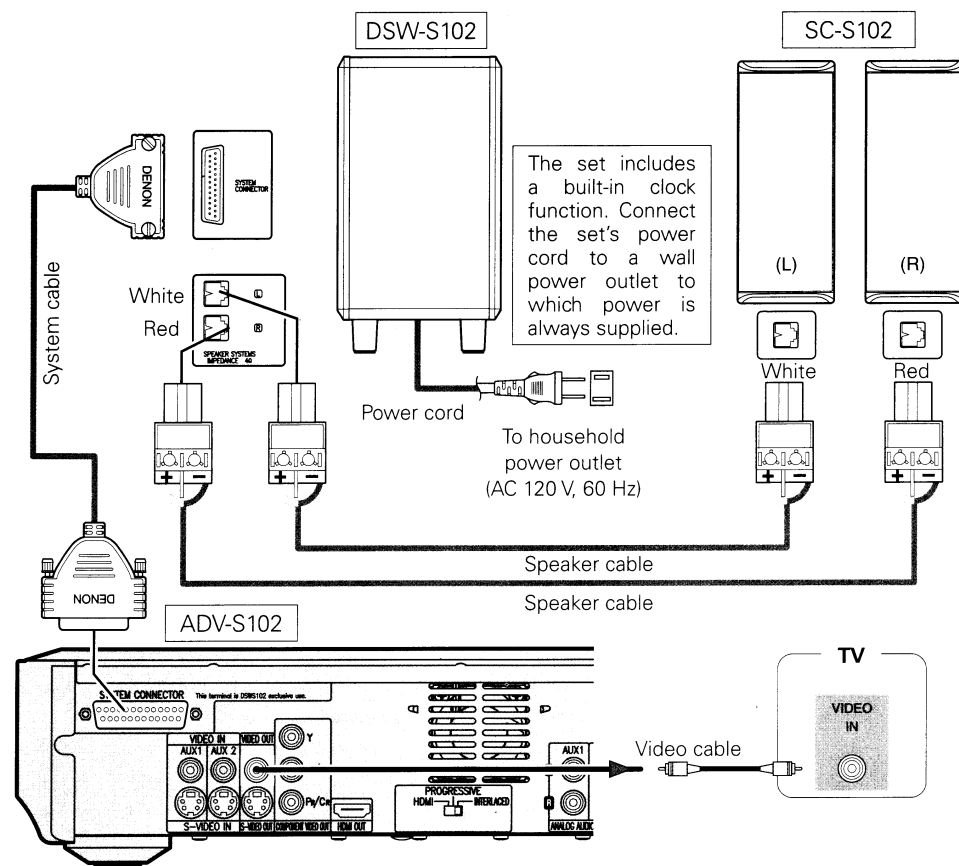

NOTE

- Connect the set's video output directly to the TV. Do not connect it via a VCR (video cassette recorder). Some discs contain copy prohibit signals, and the picture could be disturbed if such discs are played via a VCR.
- Insert the plugs securely. Incomplete connections will result in the generation of noise.
- Do not unplug the power cord while the set is operating.
- When connecting system cables and speaker cables, first lay them out sideways. When laying them out take care not to damage them.

Protector circuit

The protection circuit will be activated in the following cases:

- When the speaker output is short-circuited
- When the temperature around the set is extremely high
- When the set is used for long periods of time with a high output and the internal temperature rises

When the protection circuit is activated, the speaker output is cut off and the power supply indicator flashes. Should this occur, please follow these steps: be sure to switch off the power of this unit, check whether there are any faults with the wiring of the speaker cables or input cables, and wait for the unit to cool down if it is very hot. Improve the ventilation condition around the unit and switch the power back on.

If the protection circuit is activated again even though there are no problems with the wiring or the ventilation around the unit, switch off the power and contact a DENON service center.

Note on speaker impedance




If speakers with an impedance below the specified impedance (4 Ω /ohms) are used (for example, speakers with an impedance of 3 Ω /ohms) with the volume turned up high for long periods of time, the temperature may rise, activating the protective circuit.

When the protection circuit is activated, the output to the speakers is cut off and the power indicator blinks. If this happens, unplug the power supply cord, wait for the set to cool off and improve ventilation around the unit. Also check the wiring of the input cables and the speaker cables. After doing this, plug the power supply cord back in and turn the unit's power back on.

If the protection circuit is activated again even though there are no problems with the wiring or the ventilation around the unit, switch off the power and contact a DENON service center.

Mounting the speaker stand and bracket

- ※ Be sure to tighten the screws completely.
- ※ Also be careful when installing.

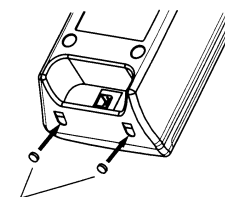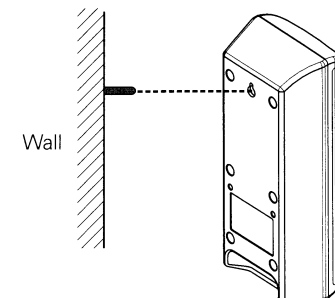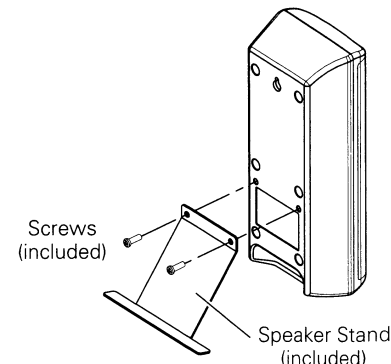


Stick the cushion pad here. (Included)

- ※ When placing the speaker system (SC-S102) on a stand, etc., stick the included cushion pads at the two corners of the bottom surface. (Refer to the illustration above.)

Connecting the Monitor

Select and connect using one of the video cables below according to the TV's terminals. The terminals provide playback with different picture qualities, in the following order (from highest to lowest):
①HDMI terminals, ②Component video terminals, ③S-Video terminals, ④Video terminals

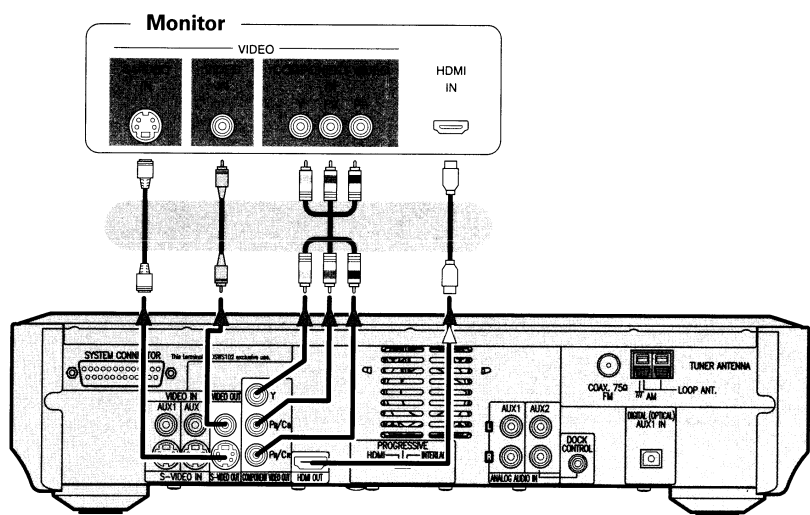

Switching the video output format

Set the **HDMI/PROGRESSIVE/INTERLACED** switch on the rear panel according to the video output format of the TV connected to the set.

※ Be sure to turn the power off before operating the switch.



- The component video terminals may be indicated differently on your TV. For details, see the TV's operating instructions.
- When PROGRESSIVE is set, picture cannot be output from VIDEO OUT/S-VIDEO OUT.

Connecting Equipment with HDMI Connectors

Digital video and digital audio can both be connected using a single HDMI cable.

NOTE

- When playing multichannel sources, the audio output is downmixed to two channels for output. In addition, the sampling frequency is lowered to 48 kHz.
- Video signals are not output properly when using devices that are not HDCP-compatible.
- Use a cable on which the HDMI logo is indicated (a certified HDMI product) for connection to the HDMI connector. Normal playback may not be possible when using a cable other than one on which the HDMI logo is indicated (a non-HDMI-certified product).
- The audio signals output from the HDMI connector (sampling frequency, bit rate, etc.) may be restricted by the connected device.



If the connected TV is only compatible with DVI-D terminals, use an HDMI/DVI conversion cable.

When connecting with an HDMI/DVI converter cable (adapter)

- HDMI video signals are theoretically compatible with the DVI format.
When connecting to a TV, etc., equipped with a DVI-D terminal, connection is possible using an HDMI/DVI converter cable, but depending on the combination of components in some cases the video signals will not be output.
- When connecting using an HDMI/DVI converter adapter, the video signals may not be output properly due to poor connections with the connected cable, etc.

Condition of signals from the S-102's HDMI output terminal	HDMI-compatible monitor	DVI-D-compatible monitor (HDCP compatible)	DVI-D-compatible monitor (HDCP non compatible)
	Both video and audio output	Only video output *	Neither video nor audio output

*: Only output when video signals are of RGB format.

Copyright protection system

In order to play the digital video and audio signals of a DVD Video disc using HDMI connections, both the connected DVD player and TV must be equipped for a copyright protection system called "HDCP" (High-bandwidth Digital Content Protection).

HDCP is a copy protection technology consisting of data encoding and mutual identification of the devices. The S-102 is HDCP-compatible. Check the operating instructions of your TV to see if they are compatible.

Setting the HDMI output resolution

Set the resolution of the video signals output from the HDMI output terminal to a resolution with which the connected devices are compatible. Press **HDMI** on the remote control unit to select.

→ 480p/576p → 720p → 1080i → 1080p → AUTO →

Connecting the Playback Components


Carefully check the left (L) and right (R) channels and the inputs and outputs, and be sure to interconnect correctly.

Control Dock for iPod

Use a DENON Control Dock for iPod (ASD-1R, sold separately) to connect the iPod to the S-102.




- When using the Control Dock for iPod, certain settings must be made on the Control Dock for iPod. For details, refer to the Control Dock for iPod's operating instructions.
- When using an iPod, refer to "iPod® Playback" (page 29).

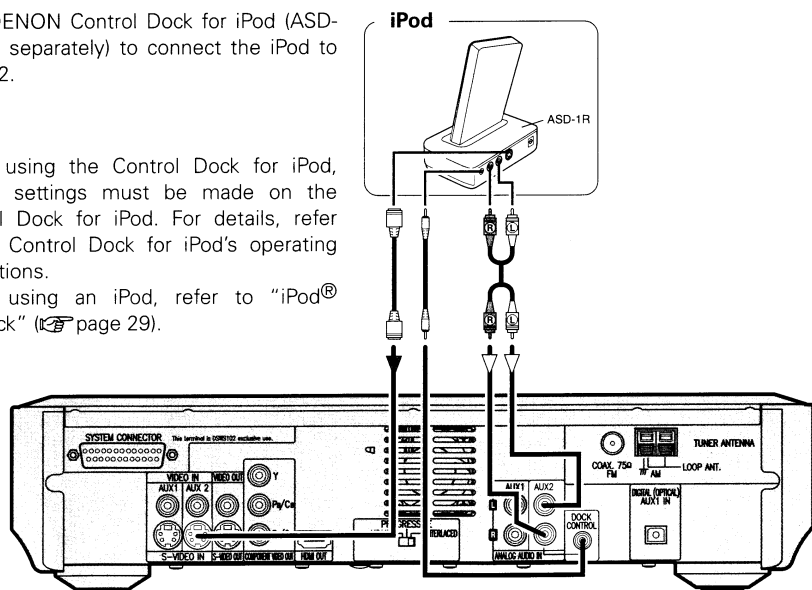


TV Tuner

Connect the cables to be used.

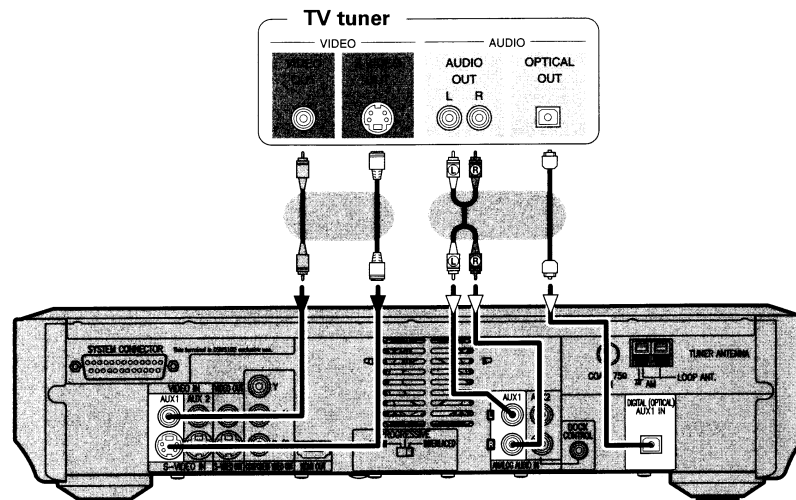

Satellite Receiver

Connect the cables to be used.

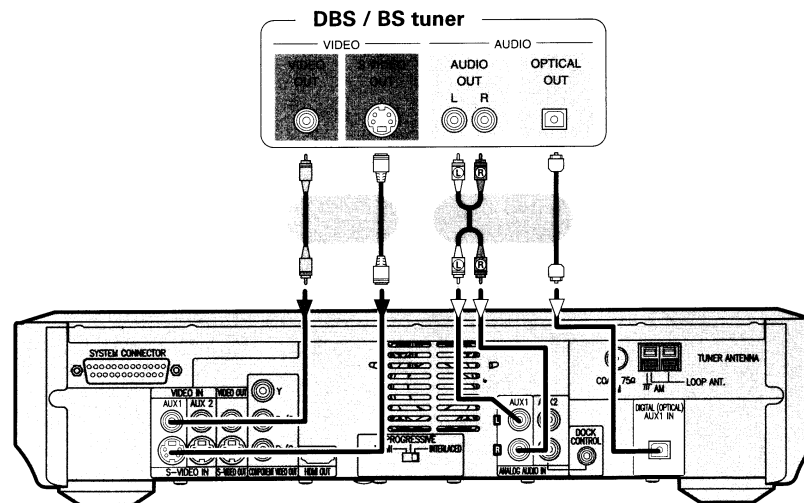

Connect to "AUX1" when using the OPTICAL terminal for the digital audio input.


Connections to Other Devices

Antenna Terminals

An F-type FM antenna cable plug can be connected directly.

AM/FM

Direction of broadcasting station

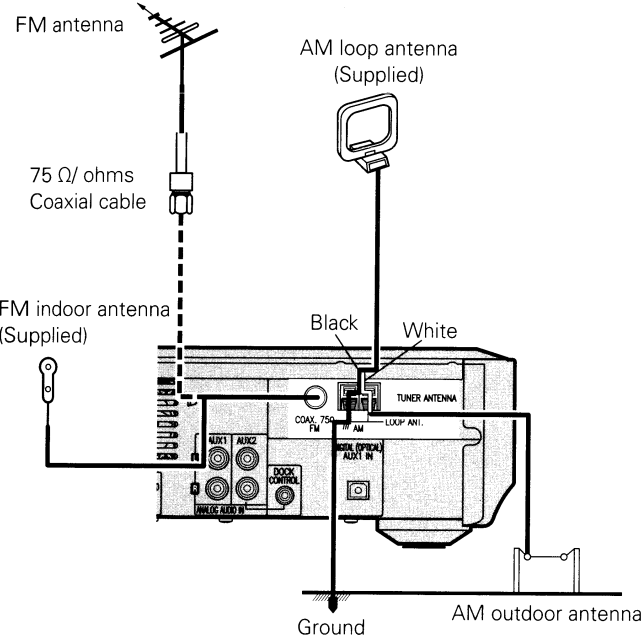

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

AM loop antenna assembly

- ① Remove the vinyl tie and take out the connection line.
 - ② Connect to the AM antenna terminals.
 - ③ Bend in the reverse direction.
 - ④ Mount
 - a. With the antenna on top any stable surface.
 - b. With the antenna attached to a wall.
- Installation hole Mount on wall, etc.

Connection of AM antennas

1. Push the lever.
2. Insert the conductor.
3. Return the lever.

NOTE

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.

Once Connections are Completed

Turning the Power On (page 20)

Getting Started

Setup

Playback

Remote Control

Information

Troubleshooting

Menu Operations

With the S-102, settings and operations for most functions can be performed by operating while looking at the menus displayed on the monitor screen.

Operations

The same operation is possible on the remote control unit.


- 1 Press the HOME button.**
The menu is displayed.
- 2 Press the $\Delta \nabla$ button to select the item you want to set, then press the ENTER button.**
- 3 Press the $\triangleleft \triangleright$ button again to select the item you want to set, then press the ENTER button.**
- 4 To change the setting:**
Press the $\Delta \nabla$ button to select the item you want to change, then press the $\triangleleft \triangleright$ button to change the setting.
* To return to the previous item, press the RETURN button.
"CHANNEL LEVEL", "DISTANCE" and "TIMER SETUP" only.
- 5 Press the ENTER button to enter the setting.**
- 6 Press the HOME button to finish.**

Example of Display of Default Values

In lists of selectable items or adjustable ranges, the item surrounded by a border is the default value.

[Selectable items] **A** B A + B

Menu Map

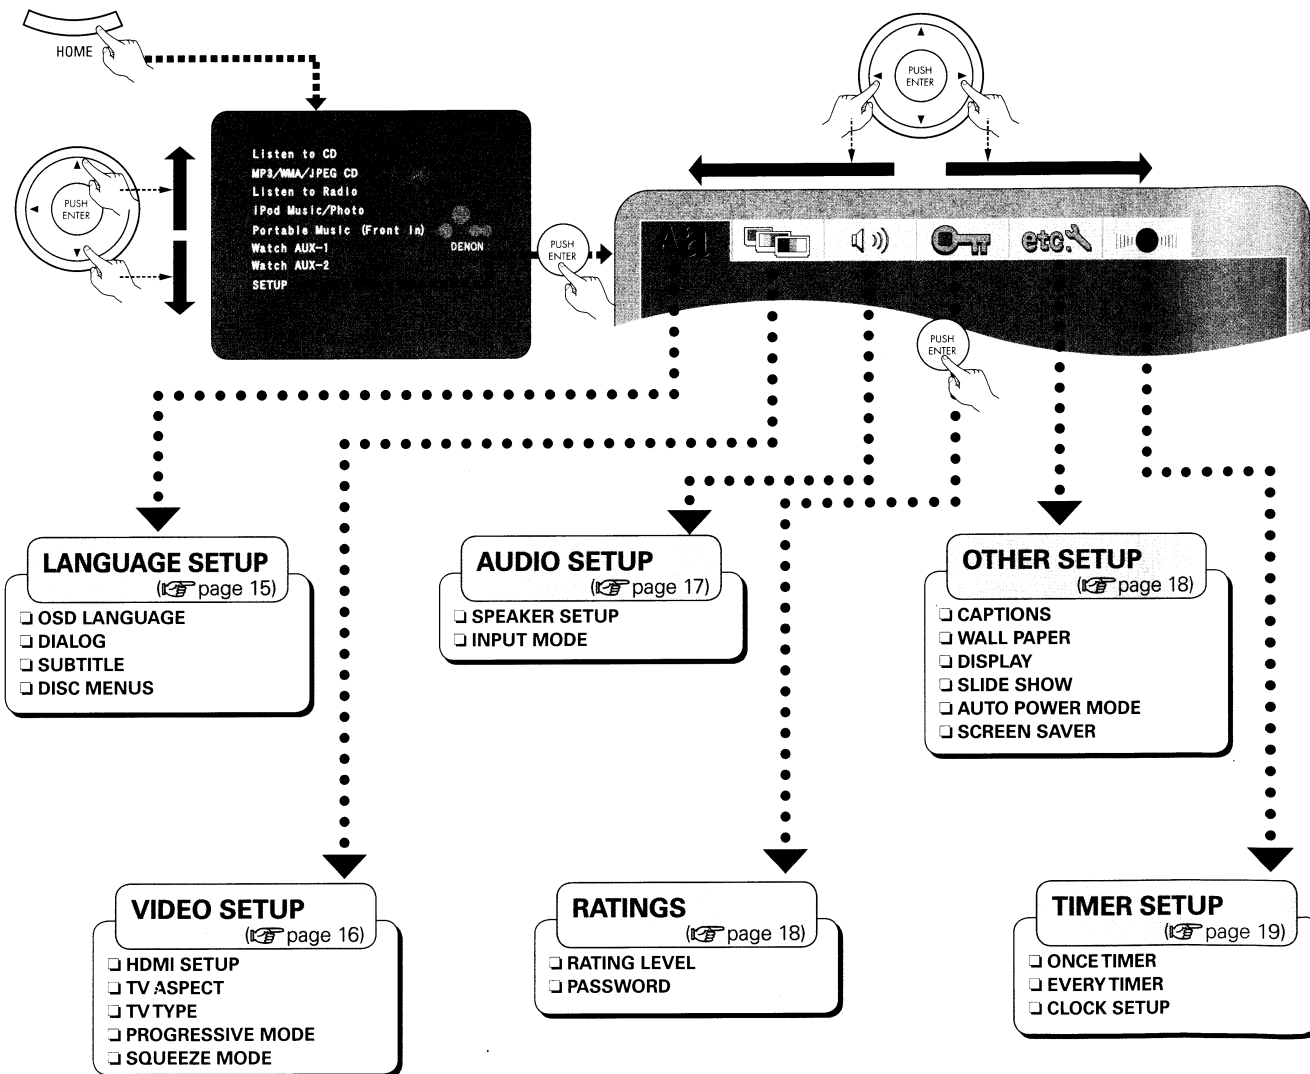


Setup

LANGUAGE SETUP

Make settings for OSD language; DVD subtitle/dialog language etc.

● Menu screen ●

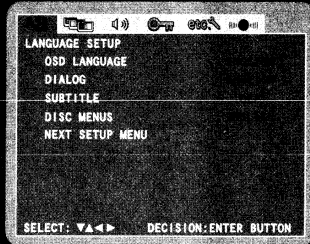

1 OSD LANGUAGE

Select the language displayed on the screen.

[Selectable items]

- ENGLISH** : Select English.
- FRANÇAIS** : Select French.
- ESPAÑOL** : Select Spanish.

2 DIALOG

Select language for dialog.

[Selectable items]

- ENGLISH** : Select English.
- FRENCH** : Select French.
- SPANISH** : Select Spanish.
- GERMAN** : Select German.
- JAPANESE** : Select Japanese.
- OTHERS** : Select other language.

3 SUBTITLE

Select language for subtitles.

[Selectable items]

- OFF** : Turn subtitles off.
- ENGLISH** : Select English.
- FRENCH** : Select French.
- SPANISH** : Select Spanish.
- GERMAN** : Select German.
- JAPANESE** : Select Japanese.
- OTHERS** : Select other language.

4 DISC MENU

Select disc menu language.

[Selectable items]

- ENGLISH** : Select English.
- FRENCH** : Select French.
- SPANISH** : Select Spanish.
- GERMAN** : Select German.
- JAPANESE** : Select Japanese.
- OTHERS** : Select other language.



If "Other" was selected, refer to the "Language code list" and input the code number using the **NUMBER (0 ~ 9)** buttons.


Language code list

Code	Language	Code	Language
6565	Afar	7079	Faroeese
6566	Abkhazian	7082	French
6570	Afrikaans	7089	Frisian
6577	Ameharic	7165	Irish
6582	Arabic	7168	Scots Gaelic
6583	Assamese	7176	Galician
6589	Aymara	7178	Guarani
6590	Azerbaijani	7185	Gujarati
6665	Bashkir	7265	Hausa
6669	Byelorussian	7273	Hindi
6671	Bulgarian	7282	Croatian
6672	Bihari	7285	Hungarian
6678	Bengali; Bangla	7289	Armenian
6679	Tibetan	7365	Interlingua
6682	Breton	7378	Indonesian
6765	Catalan	7383	Icelandic
6779	Corsican	7384	Italian
6783	Czech	7387	Hebrew
6789	Welsh	7465	Japanese
6865	Danish	7473	Yiddish
6869	German	7487	Javanese
6890	Bhutani	7565	Georgian
6976	Greek	7575	Kazakh
6978	English	7576	Greenlandic
6979	Esperanto	7577	Cambodian
6983	Spanish	7578	Kannada
6984	Estonian	7579	Korean
6985	Basque	7583	Kashmiri
7065	Persian	7585	Kurdish
7073	Finnish	7589	Kirghiz
7074	Fiji	7665	Latin
7678	Lingala	8375	Slovak
7679	Laotian	8376	Slovenian
7684	Lithuanian	8377	Samoa
7686	Latvian, Lettish	8378	Shona
7771	Malagasy	8379	Somali
7773	Maori	8381	Albanian
7775	Macedonish	8382	Serbian
7776	Malayalam	8385	Sundanese
7778	Mongolian	8386	Swedish
7779	Moldavian	8387	Swahili
7782	Marathi	8465	Tamil
7783	Malay	8469	Telugu
7784	Maltese	8471	Tajik
7789	Burmese	8472	Thai
7865	Nauru	8473	Tigrinya
7869	Nepali	8475	Turkmen
7876	Dutch	8476	Tagalog
7879	Norwegian	8479	Tonga
7982	Oriya	8482	Turkish
8065	Punjabi	8484	Tatar
8076	Polish	8487	Twì
8083	Pashto, Pushto	8575	Ukrainian
8084	Portuguese	8582	Urdu
8185	Quechua	8590	Uzbek
8277	Rhaeto-Romance	8673	Vietnamese
8279	Romanian	8679	Volapük
8285	Russian	8779	Wolof
8365	Sanskrit	8872	Xhosa
8368	Sindhi	8979	Yoruba
8372	Serbo-Croatian	9072	Chinese
8373	Singhalese	9085	Zulu

VIDEO SETUP

Make video output settings to match connected monitor.

● Menu screen ●

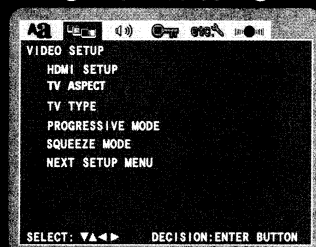

1 HDMI SETUP

Make settings for HDMI video/audio output.

HDMI SELECT

Make settings for output color space.

[Selectable items]

Y Cb Cr : Output using YCbCr format.

RGB : Output using RGB format.

HDMI AUTO FORMAT

Make settings for resolution of HDMI video output signal.

[Selectable items]

PANEL RES. : Detect monitor panel resolution and automatically set output resolution.

MAX RES. : Detect monitor max. resolution and automatically set output resolution.

HDMI BLACK LEVEL

Make settings for RGB output range.

[Selectable items]

NORMAL : Use video range from 16 (black) to 235 (white).

ENHANCED : Video range from 0 (black) to 255 (white) Use this setting to avoid black washout.

HDMI AUDIO OUT

Select whether to output audio via HDMI. (DVD only)

[Selectable items]

OFF : Enable audio output via HDMI.

ON : Disable audio output via HDMI.

2 TV ASPECT

Select monitor aspect ratio.

[Selectable items]

4:3PS : 4:3 monitor is used (For pan & scan sources).

4:3LB : 4:3 monitor is used 16:9 material is shown letterboxed.

WIDE(16:9) : 16:9 monitor is used.



With the "4:3PS" setting, 16:9 pictures are displayed with the left and right sides cut off. Sources not compatible with panning and scanning are displayed with black bands at the top and bottom.

3 TV TYPE

Select video signal format for monitor.

[Selectable items]

NTSC : NTSC monitor is used.

PAL : PAL monitor is used.

MULTI : NTSC/PAL compatible monitor is used.

4 PROGRESSIVE MODE

Select optimum progressive mode for video material.

[Selectable items]

AUTO1 : Select mode suitable for film material playback.

AUTO2 : Select mode suitable for 30-frame film material playback.

VIDEO1 : Select mode suitable for video playback.

VIDEO2 : Select this for video sources with little motion.

VIDEO3 : Select this for motion-intensive video sources.

5 SQUEEZE MODE

Select display method of 4:3 material on 16:9 screen.

[Selectable items]

OFF : 4:3 material is stretched to fill 16:9 screen.

ON : 4:3 material is shown in center of 16:9 screen.




There is no effect with interlaced video outputs.

AUDIO SETUP

Make settings for audio playback.

● Menu screen ●

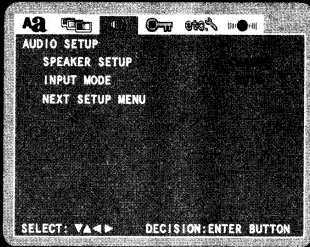

1 SPEAKER SETUP

Make detailed speaker settings.

CHANNEL LEVEL

 
Listening to the test tones at the listening position, adjust the level of the speakers for the different channels so that the volume level sounds the same from all speakers.

[Selectable items]

- TEST TONE** : Output test tone.
- FRONT LCH** : Output test tone from front left speaker.
- FRONT RCH** : Output test tone from front right speaker.
- SUBWOOFER** : Output test tone from subwoofer.



- The volume can be adjusted between the range of -12dB to +12dB.
- When "TEST TONE" was selected, the test tones are output in intervals of 4 seconds for the first two cycles, 2 seconds from the third cycle on, in the order shown below.



DISTANCE

Set distance from listening position to speakers.

[Selectable items]

- DISTANCE** : Select unit for distance.
- FRONT LCH** : Set distance from listening position to front left speaker.
- FRONT RCH** : Set distance from listening position to front right speaker.
- SUBWOOFER** : Set distance from listening position to subwoofer.
- DEFAULT** : Press the **ENTER** button to return to the default.

2 INPUT MODE

Make input mode and decode mode settings for this source.

[Selectable items]

- AUTO** : Detect type of digital input signal and decode and play automatically.
- DTS** : Decode and play only DTS input signals.
- PCM** : Decode and play only PCM input signals.
- ANALOG** : Play only signals from analog input.

RATINGS

Make viewer restriction related settings.

● Menu screen ●



1 RATING LEVEL

Select viewer restriction level.

[Selectable items]

- 0 (LOCK ALL)** : Prohibit playback of all DVDs.
- 1 ~ 7** : Prohibit playback of adult DVDs.
- 8 (NO LIMIT)** : Do not use viewer restrictions.



When "1 ~ 7" is selected, viewing cannot be restricted for adult DVDs on which no viewer restriction level has been recorded. However, when "0 (Lock All)" is selected, playback is prohibited for all discs, even discs on which no viewer restriction level has been recorded.

2 PASSWORD

Change password.


[Selectable items]

- OLD PASSWORD (0000 ~ 9999)** : Enter current password.
Default setting is "0000".
- NEW PASSWORD (0000 ~ 9999)** : Enter new password.
- CONFIRM PASSWORD** : Re-enter new password for confirmation.

OTHER SETUP

Make various other settings.

● Menu screen ●

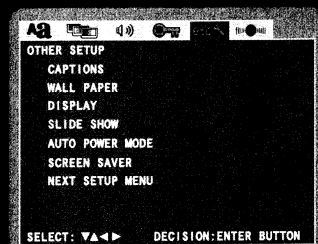

1 CAPTIONS

Make settings for closed-caption info on DVD (separate decoder required).

[Selectable items]

- OFF** : Disable closed-caption display.
- ON** : Enable closed-caption display.



DVDs including closed caption signals are indicated by the , and marks. Subtitles are not displayed for DVDs not containing closed caption signals.

2 WALL PAPER

Change the OSD background.

[Selectable items]

- PICTURE** : Set the background to a picture.
- BLUE** : Set the background to blue.
- GRAY** : Set the background to gray.
- BLACK** : Set the background to black.

3 DISPLAY

Adjust display brightness of the receiver.

[Selectable items]

- BRIGHT** : Normal display brightness.
- MEDIUM** : Reduced display brightness.
- DIM** : Very low display brightness.
- OFF** : Display is off unless controls are operated.

4 SLIDE SHOW

Make slideshow settings.

[Selectable items]

- 5SEC** : Set the playback time per image. (5 ~ 15 sec)

5 AUTO POWER MODE

Control auto power-off 30 min. after DVD playback stop (power saver mode).

[Selectable items]

- OFF** : Disable power saver mode.
- ON** : Enable power saver mode.



This function only works when the input source is set to "DVD/CD".

6 SCREEN SAVER

Use the screen saver to prevent burn-in on the monitor screen.


[Selectable items]

- OFF** : Turn the screen saver function off.
- ON** : Activate the screen saver if there is no activity for about 5 minutes.

TIMER SETUP

Settings for Timer.

● Menu screen ●

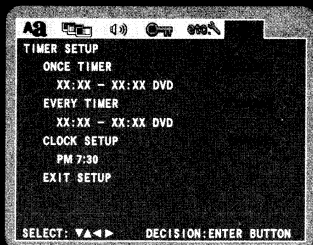

1 ONCE TIMER

Settings for once-only timer.

[Selectable items]

DISABLE : Disable once-only timer.

ENABLE : Enable once-only timer.

Start Time

Set Timer Start Time. (12-hour display)

Example: PM 0:35

End Time

Set Timer End Time. (12-hour display)

Example: PM 1:00

Function

Select Timer Function.

2 EVERY TIMER

Settings for Everyday Timer.

[Selectable items]

DISABLE : Disable Everyday Timer.

ENABLE : Enable Everyday Timer.

Start Time

Set Timer Start Time. (12-hour display)

Example: PM 0:35

End Time

Set Timer End Time. (12-hour display)

Example: PM 1:00

Function

Select Timer Function.



 
- Be sure to set the current time if you want to use the timer playback function.
- When the function is set to "TUNER", also set the preset number.
- If the times set for the sleep timer, every timer and once timer overlap, the priority is as follows:
① sleep timer ② once timer ③ every timer

Setting the "ONCE TIMER" and "EVERY TIMER"

- ① Press the < > button to select "TIMER SETUP" icon, then press the **ENTER** button.
- ② Press the Δ ∇ button to select "ONCE TIMER" or "EVERY TIMER", then press the **ENTER** button.
- ③ Press the Δ ∇ button to select "ENABLE".
- ④ Press the Δ ∇ < > button to select start time, end time, and function, then press the **ENTER** button.
- ⑤ Press the Δ ∇ button to select "EXIT SETUP", then press the **ENTER** button.
The timer is turned on and the timer standby indicator "⌚" lights.
- ⑥ Press the **ON/STANDBY** button.
The power indicator turns orange.

Checking whether or not the timer is enabled

In the standby mode, press the **STATUS** button.
The status is displayed on the S-102's display.



(When the once timer is on and the everyday timer is off)

Canceling the timer

Select "DISABLE".

To turn the timer back on, select "ENABLE".

Changing the timer settings

Redo the timer setting operation from the beginning.
The previous settings are cleared and replaced with the new settings.

If there has been a power failure

The settings are cleared.

Reset the current time, then make the settings over from the beginning.

3 CLOCK SETUP

Set Current Time.





The clock is synchronized with the power supply frequency. It may be off by about 2 to 3 minutes per month.
In such cases, reset the time.

Setting the clock

- ① Press the < > button to select "TIMER SETUP" icon, then press the **ENTER** button.
- ② Press the **ENTER** button twice to change the current time.
- ③ Press the Δ ∇ < > button to set the current time, then press the **ENTER** button.
- ④ Press the **ENTER** button to enter the setting.



- To check the current time when the regular display is displayed, press the **STATUS** button once.
- The time can be displayed by pressing the **STATUS** button when the power is in the standby mode. (When this is done, the set is no longer in the low power consumption standby mode.)
When pressed twice while the time is displayed, the display turns off and the set is put back in the low power consumption standby mode.

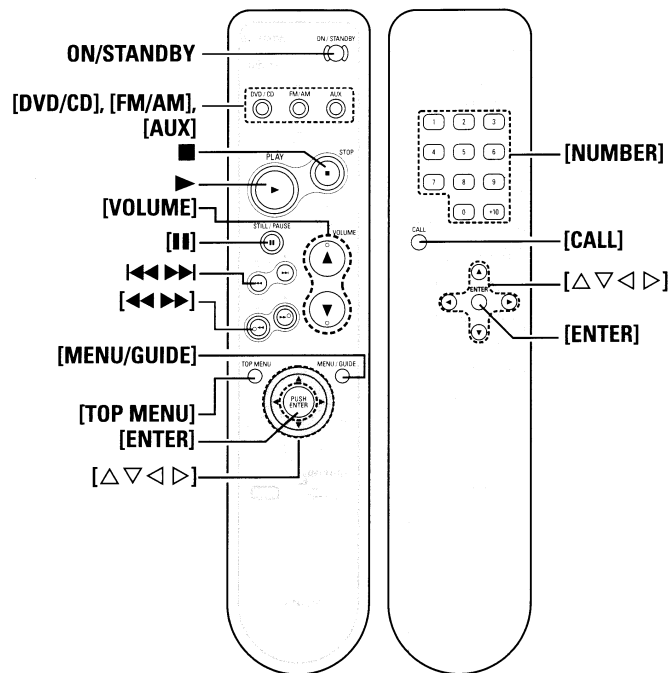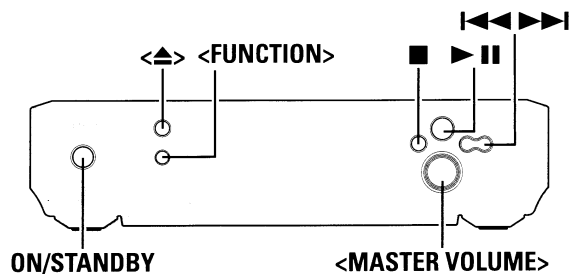

About the button names in these explanations

- < > : Buttons on the main unit
- [] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

Playback

Preparations

Turning the Power On

Press **ON/STANDBY**.

When no disc is loaded, "0h00m00s" is displayed.

When a disc is loaded, playback starts automatically. (DVD only)

Setting the power to the standby mode:

Press **ON/STANDBY**.

Turning the power off:

Unplug the power cord from the wall outlet.



Power indicator

StandbyRed

Power onBlue

When the timer is setOrange

NOTE

Be sure to stop playback before turning the power off.

Loading Discs

In the stop mode, press <▲> to open the disc tray.

※ "Loading discs" (page 4).

※ As long as the menu is displayed on the TV screen, the disc is still turning. Be sure to stop the disc first, then open the disc tray.

To close the disc tray

Press <▲> again.

 
NOTE

Do not place any foreign objects in the disc tray. Doing so could damage it.

Input source switching

Press <FUNCTION> or [DVD/CD], [FM/AM] or [AUX].

When <FUNCTION> is pressed



When [AUX] is pressed



※ "IN iPod" and "IN Front IN" are only displayed when the corresponding device is connected.

※ When using a Control Dock for iPod, "IN AUX2" is not displayed.

[Selectable items]

DVD/CD : You can view/listen to DVDs or CDs.

TUNER : You can listen to AM or FM broadcasts.

AUX1, 2 : You can listen to the sound or view the picture of an external device.

FRONT IN : You can listen to the sound of a portable player.

iPod : You can listen to the music of an iPod or view photo data.

Adjusting the Master Volume

Either turn <MASTER VOLUME> or press [VOLUME ▲▼].

The volume level is displayed.

※ The volume can be adjusted within the range of -60 to 0 to +18dB.

Depending on the input signal, surround mode, speaker settings and channel level settings, however, it may not be possible to adjust the volume up to +18dB.

Playing a DVD/Music CD Disc

Press ►.

The "►" indicator lights and playback begins.



- For details, refer to the respective disc's instructions. Some discs may be intentionally designed by their authors to work in ways other than described in this manual.
- Before playing DVD video discs, switch the connected TV's input.

Stopping playback

Press ■.



• Resume play memory function (DVD only)

With the S-102, when the ■ button is pressed, that position is stored in the memory. (At this time, "►" flashes on the display.) When the ► button is pressed after pressing the ■ button, playback resumes from the position at which it was stopped.

- ※ The resume play memory function is canceled if the disc tray is opened or the ■ button is pressed a second time.
- ※ The resume play memory function only works for discs for which the elapsed time is shown on the display during playback.

Stopping playback temporarily

Press <►II> or [II].

The "II" indicator lights.

- ※ To resume playback, press <►II> or [►].

Fast-forwarding and fast-reversing (searching)

During playback, press [<<<] or [>>>].

The fast-forward/fast-reverse speed increases each time the button is pressed.

- ※ To return to normal playback, press [►].

Moving to the beginning of tracks (skipping)

Press ►►I or I◀◀ during playback.

- The disc is skipped the number of chapters or tracks equal to the number of times the button is pressed.
- When pressed once in the return direction, playback returns to the beginning of the currently playing chapter or track.
- If pressed within 3 seconds after playback has started, the previous chapter is selected.

Finding tracks directly

1 During playback, use [CALL] to select the search mode.

For DVD video discs: Title ↔ Chapter

2 Press [NUMBER] (0 ~ 9, +10) to select the track.

Example : Track 4 : [4]

Example : Track 12 : [+10] [2]

Example : Track 20 : [+10] [+10] [0]


- ※ The search mode set by pressing [CALL] is stored in the memory until the power is turned off.




Discs are divided into a number of large sections (Title) and small sections (Chapter). Each of these sections is assigned a number.

For example:

DVD Video

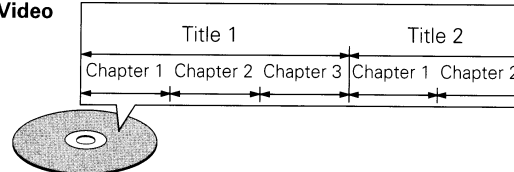

Music CDs

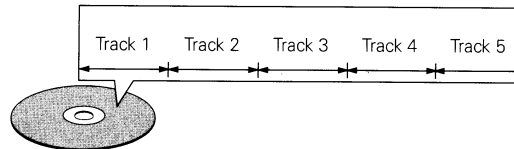

Using the Top Menu/DVD Menu (DVD Video)

On DVDs containing multiple titles, it is possible to select and play the desired title from the top menu. Some DVDs include a special menu called the "DVD menu".

1 During playback, use [TOP MENU] or [MENU/GUIDE].

2 Use [△▽◀▶] to select the desired title, then press [ENTER] or ►.

Or, use [NUMBER] (0 ~ 9, +10) to select the desired title.


Playback starts.

TOP MENU	
Apple	Banana
Orange	Strawberry
Peach	Pineapple

Example : Top menu

DVD MENU
1. SUBTITLE
2. AUDIO
3. ANGLE

Example : DVD menu

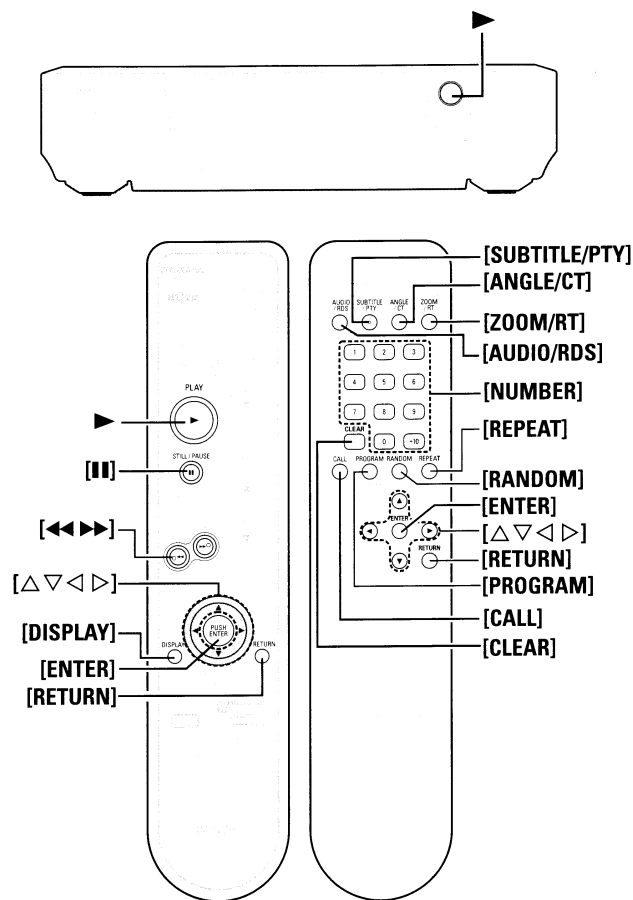

About the button names in these explanations

- < > : Buttons on the main unit
[] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

Switching the Audio Language, Subtitle Language and Angle (DVD Video)

For DVDs containing multiple audio languages, subtitle languages and angles, the language or angle can be switched during playback.

During playback, use [AUDIO/RDS], [SUBTITLE/PTY] or [ANGLE/CT].

The language or angle switches each time the button is pressed.



- With some discs it is not possible to change the audio language during playback. In such cases, select from the "SETUP".
- The language selected in the default settings (page 15) is set when the power is turned on and when the disc is replaced.

Using the Playback Control Function (DVD Video)

For DVD Video on which "Includes playback control" or the like is indicated on the disc or jacket, a menu screen is displayed.

Select the item you want to see, then start playback.

Select the item you want to see using [Δ▽◀▶], then press [ENTER] or ►.

Or, use [NUMBER] (0 ~ 9, +10) to select the desired title. Playback starts.

Example :

1. Opening
2. 1st movement
3. 2nd movement
4. 3rd movement
5. Ending

To return to the menu screen

During playback, press [RETURN].

Playing Frame by Frame (DVD Video)

In the still mode, press [II] on the remote control unit.

The picture moves forward one frame each time the button is pressed.

※ Press ► to return to normal playback.

Slow Playback (DVD Video)

In the still mode, press [◀◀] or [▶▶] on the remote control unit.

When pressed again, the slow play speed increases.

※ Press ► to return to normal playback.

Playing in the Zoom Mode (DVD Video)

1 During playback or still mode, press [ZOOM/RT].

→ OFF → ×1.5 → ×2 → ×4 →

2 Press [Δ▽◀▶].

Move the zoomed picture.



- The zoom function may not work properly at some scenes.
- Zooming is not possible with some discs.
- Zooming is not possible at the top menu or the menu screen.

Playing Repeatedly <Repeat playback> (DVD Video/Music CD)

During playback, press [REPEAT].
Playback in the respective repeat mode starts.

※ DVD video discs:

- Chapter repeated ("1" lights on the display)
- Title repeated ("1" lights on the display)
- Repeat playback cancelled (indicator turns off) →

※ Music CD discs:

- Track repeated (1) → Disc repeated (1) → Repeat playback cancelled →

Playing Tracks in the Desired Order <Program> (Music CD)

Up to 20 tracks can be programmed.

1 In the stop mode, press [PROGRAM].
The "PROG" indicator lights.

2 Use [NUMBER] (0 ~ 9, +10) to select the traks.

※ **Example :** To program tracks 3, 12, 7 to play in that order:
[3] [+10] [2] [7]

3 Press ►.

Checking the order of the programmed tracks

In the stop mode, press [CALL] repeatedly.

The track numbers are displayed in the programmed order each time the button is pressed.

Clearing programmed tracks one track at a time

In the stop mode, press [CLEAR].

The last track programmed is cleared each time the button is pressed.

Clearing the last programmed track

In the stop mode, press [PROGRAM].

The "PROG" indicator turns off.

Playing Random Order <Random playback> (Music CD)

1 In the stop mode, press [RANDOM].
The "RAND" indicator lights.

2 Press ►.
The tracks start playing in random order.

Canceling random playback

In the stop mode, press [RANDOM].
The "RAND" indicator turns off.

Playing Music Files

Before Playing MP3 or WMA Files

There are many music distribution sites on the Internet allowing you to download music files in MP3 or WMA (Windows Media® Audio) format. The music (files) downloaded from such sites can be stored on CD-R or CD-RW discs and played on the S-102.

"Windows Media" and "Windows" are registered trademarks or trademarks in the United States and other countries of Microsoft Corporation of the United States.

Creating MP3 and WMA Files Compatible with the S-102

- Writing software format: "ISO9660 level 1"
See the writing software's instructions.
- Compatible: ID3-Tag (Ver.1 or 2), meta-tag.
- Incompatible: Packet write, playlists.
- Displayable characters: "Hankaku" English letters and numbers, capital letters and _ (underscore).
No. characters displayable: 256

- When Playing MP3 or WMA Files, the digital output is converted to PCM. The signals are output with the same sampling frequency as when they were written.
- The positions of the folders or files may have been changed by the writing software when burning the MP3/WMA files onto the CD-R/CD-RW disc, so the files may not play in the expected order.
- Copyright-protected files cannot be played. Note that depending on the software used for burning and other conditions, some files may not play or display correctly.

Playable MP3/WMA file			
File format	Sampling frequency (kHz)	Bit rate (kbps)	Extension
MP3	32, 44.1, 48	32 ~ 320	.MP3
WMA	32, 44.1, 48	64 ~ 160	.WMA

Playing MP3 or WMA Files

1 Load a CD-R or CD-RW disc containing music files in the MP3 or WMA format into the disc tray (▶ page 4).

2 Select the folder you want to play using [△▽], then press [ENTER].



3 Select the file you want to play using [△▽], then press [ENTER] or ►.
Playback starts.

Switching the time display

During playback, press [DISPLAY].

※ SINGLE ELAPSED (Elapsed time of currently playing track)

→ SINGLE REMAIN (Remaining time of currently playing track) →

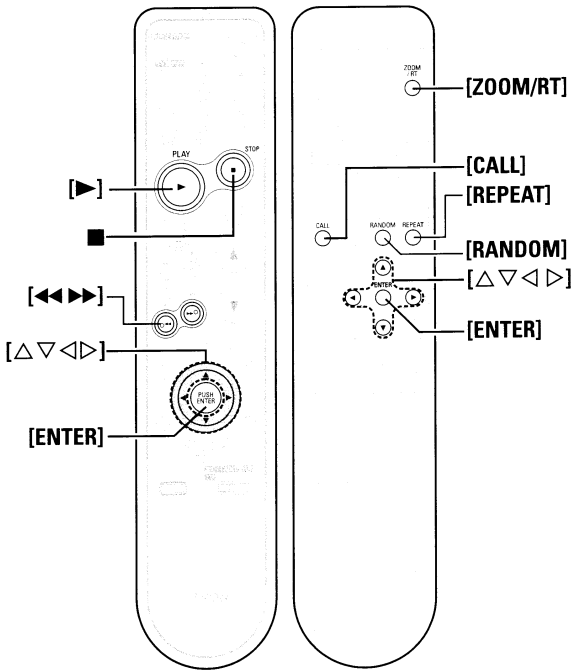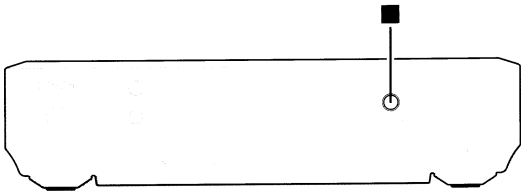

About the button names in these explanations

- < > : Buttons on the main unit
[] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

Changing the play mode

FOLDER:

Playing all the files in the selected folder in order

FOLDER REPEAT:

Playing all the files in the selected folder repeatedly

RANDOM ON:

Playing all the files in the selected folder in random order

TRACK REPEAT:

Playing only the selected file repeatedly

Setting random playback using the remote control unit

In the stop mode, press **[RANDOM]** , then press **[▶]** or **[ENTER]**.
The “RAND” indicator lights and random playback begins.

※ The way in which the files are played in random order depends on the selected play mode.

Setting repeat playback using the remote control unit

During playback, press **[REPEAT]** , then press **[▶]** or **[ENTER]**.

※ TRACK REPEAT → FOLDER REPEAT → FOLDER (Repeat off)



Programmed playback is not possible on discs containing MP3/WMA files.

Playing Still Picture Files (JPEG format)

Still picture files in JPEG format recorded on CD-R/CD-RW discs, picture CDs and Fujicolor CDs can be played as slide shows on the S-102.

Creating JPEG Files Compatible on the S-102

- Writing software format: “ISO9660 level 1”
See the writing software’s instructions.
- Displayable characters: “Hankaku” English letters and numbers, capital letters and _ (underscore).
- JPEG files written on Macintosh computers cannot be played.
- The order in which the JPEG files are played may differ from the order you expect because the writing software may change the position of the folders or files when writing them on the CD-R/CD-RW disc.
- Depending on the writing conditions and software, it may not be possible to play or properly display some files.

Playable JPEG file	
Resolution (pixel)	Extension
0000×0000 ~ 2048×1536	.JPG/.JPE

Playing JPEG Files

Operate in the same way as described at “Playing MP3 or WMA Files” (🔍 page 23).

Changing the folder or file to be played

“Playing MP3 or WMA Files” (🔍 page 23)

Changing the play mode

“Playing MP3 or WMA Files” (🔍 page 24)

Changing the orientation of the picture

During playback or still mode, press [△ ▽ ◀ ▶].

△: Invert vertically

▽: Invert horizontally

◀: Rotate 90° counterclockwise

▶: Rotate 90° clockwise

Play the image in the zoom mode

During playback or still mode, press [ZOOM/RT].

◀◀: zoom out

▶▶: zoom in

※ Press [△ ▽ ◀ ▶] (to move the zoomed picture).

※ Continuous playback (SLIDE SHOW) is not possible in the zoom mode.

The way of switching to the next image during continuous JPEG image playback (SLIDE SHOW) can be selected

During playback, press [CALL].

SLIDE SHOW MODE: 1 to 11 → RANDOM → OFF

Playing Picture CD/Fujicolor CD

The S-102 can play Kodak Picture CDs and Fujifilm Fujicolor CDs so you can view the photographs stored on them on a TV screen.

※ Picture CDs are CDs containing photographs taken on conventional silver film cameras which have been converted into digital data. For details on Kodak Picture CDs and Fujicolor CDs, please contact a store offering film development services.

“KODAK” is a trademark of Eastman Kodak Company.

“FUJICOLOR CD” is a trademark of Fuji Photo Film Co, Ltd.

Load the picture CD or Fujicolor CD in the disc tray.

Playback of the still pictures starts automatically.

※ The pictures are played repeatedly until ■ is pressed.

Enjoying Surround Sound

Dolby Digital, DTS and other multi-channel sources, CD, video and other 2-channel sources can be played with similar atmospherics to the cinema.

[Connection procedure]


- ① Turn on the power of the S-102 and TV.
("Turning the Power On" (🔍 page 20), TV operating instructions)
- ② Switch the TV's input.
(TV operating instructions)
- ③ Switch the input source (🔍 page 20).
- ④ Set the input mode.
- ⑤ Select the surround mode.
- ⑥ Play the source.
- ⑦ Set the surround parameter (🔍 page 26).
- ⑧ Adjust the volume (🔍 page 20).

Set the Input Mode

When the input source is set to “DVD/CD” or “AUX,” the input mode can be switched (“Audio setup,” “Input mode” (🔍 page 17, 20).



- When playing CDs containing live recordings, etc., in the “auto” mode, the sound may be slightly broken when starting playback. If so, play in the “PCM” mode.
- When playing DTS sources in the “AUTO” mode, there may be noise when starting playback or searching. If so, play in the “DTS” mode.
- When playing DTS-compatible CDs in the “PCM” mode, noise is output. When playing DTS-compatible sources, be sure to do so in the “auto” or “DTS” mode.

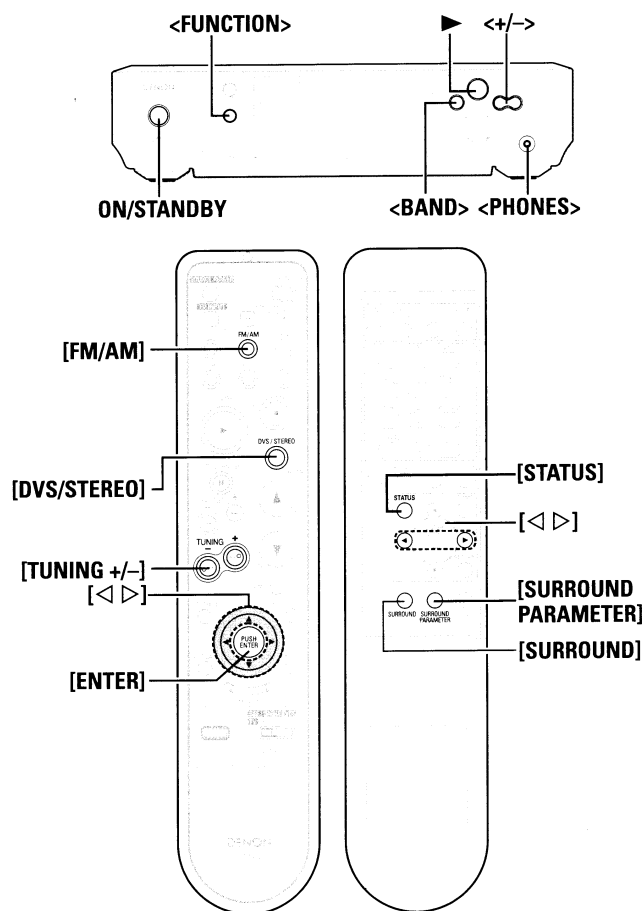

About the button names in these explanations

 
- < > : Buttons on the main unit
- [] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

Selecting Surround Mode

Press **[SURROUND]** to select the surround mode.



※ The "DOLBY VS REF. (WIDE)" and "STEREO" modes can also be selected by pressing **[DVS/STEREO]**.

[Selectable items]

DOLBY VS REF.

(Dolby Virtual Speaker reference mode):

This is the standard mode for experiencing 5.1-channel surround sound with only speakers for the two front channels.

DOLBY VS WIDE

(Dolby Virtual Speaker wide mode):

The Dolby Virtual Speaker mode's front channel sound field is expanded.

DOLBY H/P

(Dolby Headphone mode):

This is the surround mode for playing with headphones. A surround sound field is played with regular headphones.

DOLBY H BYPAS

(Dolby Headphone bypass mode):

The sound is played in the normal stereo mode rather than the surround mode when playing with headphones.

STEREO

Sound is played in the direct or stereo mode.

ROCK ARENA

This is an original DENON surround mode. It achieves the atmosphere of a live concert in an arena with reverberations circling in from the sides.

JAZZ CLUB

This is an original DENON surround mode. This achieves the atmosphere of a live concert hall with a low ceiling surrounded by hard walls, as if the artist were playing very close to you.



The "ROCK ARENA" and "JAZZ CLUB" modes may not achieve very strong effects, depending on the source being played. In this case, try other surround modes, without worrying too much about their names.

Set the Surround Parameter

Use **[SURROUND PARAMETER]** to display the various surround parameters, then select with **[<>]**.

After several seconds, the display returns to normal and the parameters you have set are entered automatically.

[Selectable items]

D.COMP (Dynamic range compression):

Optimized setting for late-night listening.

D.COMP only works when playing program sources record in Dolby Digital or DTS.

LFE

(Low Frequency Effect):

This sets the level of the subwoofer reproducing the low bass signals.

※ Recommended level

When playing Dolby Digital software: 0 dB

When playing DTS movie software: 0 dB

When playing DTS music software: -10 dB



CINEMA

When the Dolby Headphone mode is selected, analog, PCM or other 2-channel sources are decoded in the Dolby Pro Logic II Cinema mode and transformed into multiple channels for playback.

MUSIC


When the Dolby Headphone mode is selected, analog, PCM or other 2-channel sources are decoded in the Dolby Pro Logic II Music mode and transformed into multiple channels for playback.

Playing Dolby Digital/DTS Multi-Channel Sources (Digital input only)

- 1 Switch the input source (ⓘ page 20).
(DVD and AUX1 digital input)
- 2 Use [SURROUND] to select the "DOLBY VS REF" or "DOLBY VS WIDE".
The "□□ VS" indicator lights.
- 3 Play sources with the  or  mark sources.
The "□□D" or "dts" indicator lights, depending on the playback source's signal format.
- 4 Use [SURROUND PARAMETER] to display the various surround parameters, then select with [◀ ▶].

[Selectable items] **D.COMP** **LFE**

Playing Dolby Digital/PCM/Analog 2-Channel Sources

- 1 Switch the input source (ⓘ page 20).
- 2 Use [SURROUND] to select the "DOLBY VS REF" or "DOLBY VS WIDE".
The "□□ VS" indicator lights.
- 3 Play sources with the  mark.
The "□□D" indicator lights, depending on the playback source's signal format.
- 4 Use [SURROUND PARAMETER] to display the various surround parameters, then select with [◀ ▶].

[Selectable items] **D.COMP** **LFE**

To check the currently playing source and various settings

In the stop mode, press [STATUS].

※ The playback source and the various surround settings are shown on the display each time the button is pressed.

Listening in the Dolby Headphone Mode

- 1 Switch the input source (ⓘ page 20).
Plug the headphones (sold separately) into the <PHONES> jack.
The sound from the speakers is automatically cut off.
- 2 Press [SURROUND] to select the "DOLBY H/P".
The "□□H" indicator lights.
- 3 Play the source.
- 4 Use [SURROUND PARAMETER] to display the various surround parameters, then select with [◀ ▶].

[Selectable items]

 
D.COMP **LFE** **CINEMA** **MUSIC**

NOTE

Be careful not to set the volume too high when using headphones.

Listening to Radio Broadcasts

Tuning in Broadcast Stations

- 1 Press <FUNCTION> or [FM/AM] to select "TUNER".
- 2 Use <BAND> or [FM/AM] to select the reception band.

- 3 Use <+/->, [TUNING +/-] or [◀ ▶] to select the reception frequency.
When a station is received, the "TUNED" indication will light.



A humming sound may be heard when using a TV nearby while receiving AM programs. If this happens, move the system as far from the TV as possible.

Display of the FM broadcast reception status

- When the reception band mode is set to "FM AUTO" and a stereo broadcast is tuned in, the "ST" indicator lights.
- If the signal is weak and stable stereo reception is not possible, set the reception band mode to "FM MONO" and receive the program in monaural. The "MONO" indicator lights.

Main unit <+/-> button

There are two, switchable modes for <+/-> the tuning mode for setting the reception frequency (setting upon purchase), and the preset mode for selecting the preset broadcast station.

Switching the preset mode

Pressing <+> while pressing in <BAND>.

"PRESET" is flashes for approximately 5 seconds.

Switching the tuning mode


Pressing <-> while pressing in <BAND>.

"TUNING" is flashes for approximately 5 seconds.

Auto tuning

When [TUNING +/-] or [◀ ▶] is pressed and held in, the set automatically starts searching for a broadcast station.

※ Stations whose signal is weak cannot be tuned in.

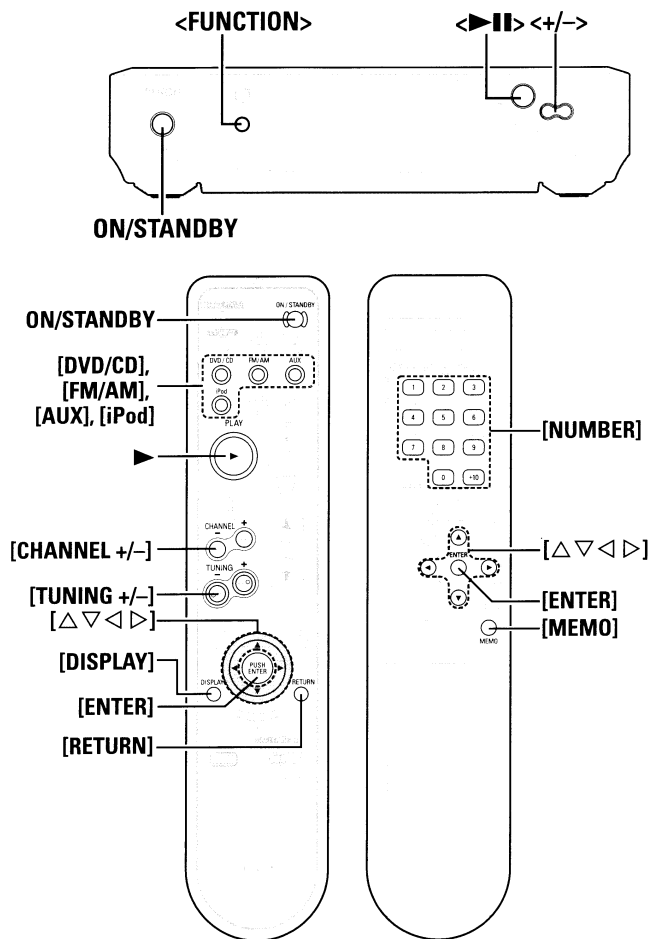

About the button names in these explanations

- < > : Buttons on the main unit
[] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

To stop the auto tuning

Press [TUNING +/-] or [◀ ▶].

Manual tuning

The reception frequency changes each time [TUNING +/-] or [◀ ▶] is pressed.

Naming the Currently Tuned in Broadcast Station and Presetting it

Up to 60 stations (total for AM and FM) can be preset.
Names of up to 8 characters can be input.

1 Tune in the broadcast station

2 Press [MEMO] twice.

The name input mode is set.

3 Use [Δ ▽] to select the character, then press [ENTER].

※ Characters that can be input.

A to Z, 0 to 9 + [CALL] for small letters
! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ { } (space)

- ※ Press [◀ ▶] to move the cursor.
Use this to correct input characters.
- ※ To cancel character input, press [MEMO].
Everything that has been input is canceled.

4 Once you are finished inputting, press [ENTER].

"P0 -" flashes on the preset number display.

5 Use [Δ ▽] to select the number, then press [ENTER].

Or use [NUMBER] (0 ~ 9, +10) to select the number.

The preset number, reception band and reception frequency are displayed, then the name of the broadcast station appears.

Changing the broadcast station name

- ① Call out the preset name you want to change, then press [MEMO] twice.
- ② Perform steps 3 and 4 at "Naming the currently tuned in broadcast station and presetting it"

To only preset

- ① Press [MEMO] while the broadcast station is tuned in.
- ② Select the number using [Δ ▽], then press [ENTER].
Or use [NUMBER] (0 ~ 9, +10) to select the number.

NOTE

If a station is preset at a number that has already been preset, the old settings are deleted and replaced with the new settings.

Automatically Presetting FM Stations (Auto preset)

Up to 60 stations can be preset.

1 Press <FUNCTION> or [FM/AM] to select "TUNER".

2 Press and hold in <II>.

"AUTO PRESET?" and "-NO/ +START" are displayed alternately.

※ Press <-> to cancel auto presetting.

3 Press <+>.

"SEARCH" flashes, then "COMPLETED" is displayed.



- Broadcast stations whose antenna signal is weak cannot be preset automatically. If you wish to preset such stations, tune them in manually, then perform the operation at "Naming the currently tuned in broadcast station and presetting it"
- Once auto presetting starts, it cannot be canceled (it takes about 60 seconds to be completed).


Listening to Preset Stations

Use <+/->, [CHANNEL] or [NUMBER] (0 ~ 9, +10) to select the preset number.

※ Operate <+/-> after switching to the preset mode (page 27).

iPod® Playback

With the S-102, you can listen to music or view photo data on an iPod. It is also possible to operate the iPod from the main unit or remote control unit.

 iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

※ The iPod may only be used to copy or play contents that are not copyrighted or contents for which copying or playback is legally permitted for your private use as an individual. Be sure to comply with applicable copyright legislation.

NOTE


- DENON will accept no responsibility whatsoever for any loss of iPod data.
- Depending on the type of iPod and the software version, some functions may not operate.

Listening to Music

- 1 Press **<FUNCTION>** or **[iPod]** to select “iPod”.
- 2 Turn on the TV’s power. Set the TV’s input function to the S-102 input.
- 3 Press **▶**.
Playback starts.
※ Also read the iPod’s operating instructions.


Switching the S-102's display (FL)



 In the browse mode, when “Songs” is selected from the “TOP MENU” while a track is playing, the track stops.


Viewing Still Pictures (Only for iPods Equipped with the Photo Function)

- 1 Press **<FUNCTION>** or **[iPod]** to select “iPod”.
- 2 Turn on the TV’s power. Set the TV’s input function to the S-102 input.
- 3 Press **[RETURN]** to select the “Remote iPod”.
The iPod’s display menu is displayed.
- 4 Watching the iPod’s display, press **[Δ ∇]** to select the “Photos”.
- 5 Press **[ENTER]**.
The iPod’s photographs are displayed on the TV monitor.









 
 When an iPod is connected and a slide show is playing, the iPod is not charged. Charge it ahead of time.

Disconnecting the iPod

Set the S-102’s power to the standby mode using **ON/STANDBY**.

 It is also possible to use **<FUNCTION>**, **[DVD/CD]**, **[FM/AM]** or **[AUX]** to switch the input source to something other than “iPod” then disconnect the iPod.


Remote control and iPod button relations

Remote control unit buttons	iPod buttons	Operation on the S-102
		Play the track. ※ Play/Pause in remote mode
		Pause the track.
		Play the track from the beginning/ Play the next track.
		Fast-reverse the track/Fast-forward the track.
	Click Wheel	Select an item.
ENTER	Select	Enter the selection or plays the track.
RETURN	–	Switch between the browse mode and the remote mode.
REPEAT	–	Switch the repeat function.
RANDOM	–	Switch the shuffle function.
MENU/GUIDE	MENU	Display the menu or return to the previous menu. ※ In remote mode, the iPod backlight goes off when you press Play/Pause for an extended period.

Playing a Portable Audio


Your portable audio player can be connected to the S-102’s portable jack to play tracks on the portable audio player.

- 1 Press **<FUNCTION>** or **[AUX]** to select “Front in”.
- 2 Play the portable audio player.
The Portable Audio are output.
※ Also read the portable audio player’s operating instructions.

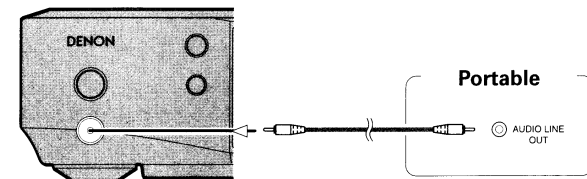

Connect the S-102 and portable audio player using a separately sold mini-stereo audio cable.

Advanced Operation

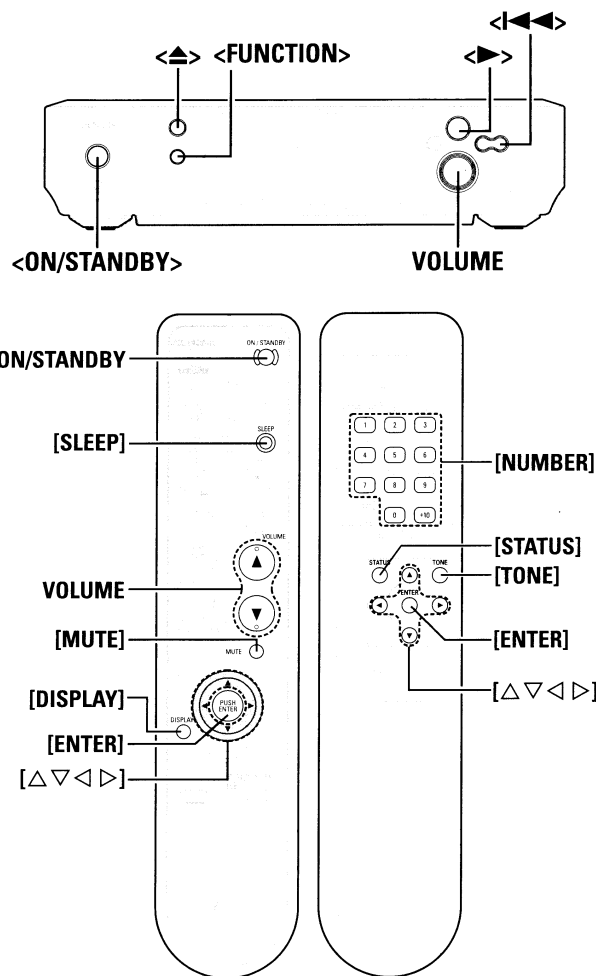

About the button names in these explanations

- < > : Buttons on the main unit
 [] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

On-Screen Display

Using the Disc Information Screen (DVD Video/Music CD)

It is possible to display information on the disc (titles, chapters, tracks and times) and to specify the position to be played.

1 During playback, [DISPLAY].

2 Use [◀ ▶] to select the “”, then use [Δ ∇] to select the item you wish to change.

Specifying the title, chapter or track

After selecting “Title”, “Chapter” or “Track”, use [NUMBER] (0 ~ 9, +10) to select the number.

For DVD Video discs, also press [ENTER].

- Playback starts from the specified position.

To specify the elapsed time

① After selecting the elapsed time display, use [DISPLAY] to select the time display to be specified.

② Input the time using [NUMBER] (0 ~ 9, +10), then press [ENTER].

Example : To specify 1 hour, 32 minutes and 47 seconds

Press [1] [3] [2] [4] [7].

To specify 1 minutes and 26 seconds

Press [0] [0] [1] [2] [6].

- Playback starts from that tracks.

For some discs it may not be possible to specify the time.

Closing the disc information screen

Press [DISPLAY] again.

Using the Multi-Function Screen (DVD Video)

The audio language, subtitle language and angle can be switched.

1 During playback, [DISPLAY].

2 Use [◀ ▶] to select the “”, then use [Δ ∇] to select the item you wish to change.

3 Use [NUMBER] (0 ~ 9, +10) to select the number. Playback starts with the specified settings.



- For some discs, it may not be possible to switch the audio or subtitle language during playback. In this case select “Audio” or “Subtitle” (page 22).
- When the power is turned on or the disc is changed, the disc is played with the languages set at “Audio” or “Subtitle” (page 22).

Closing the multi-function screen

 
Press [DISPLAY] again.

Setting the Sleep Timer

Use this function to automatically switch the power to the standby mode after a specific amount of time (minutes).

1 Set the current time (see page 19).

2 During playback, use [SLEEP] to select the time. The "SLEEP" indicator flashes.



※ After about 4 seconds, the "SLEEP" indicator stops flashing, remaining lit, and the settings are automatically entered.

3 The power is set to the standby mode after the set amount of time.

Canceling the sleep timer

Press [SLEEP] until the "SLEEP" indicator turns off.

※ The sleep timer can also be canceled by setting the S-102's power to the standby mode using ON/STANDBY.

Checking the time remaining until the sleep timer starts

In the stop mode, press [STATUS].

The time is displayed.

※ The time can be displayed by pressing [STATUS] when the power is in the standby mode. (When this is done, the set is no longer in the low power consumption standby mode.)

When pressed twice while the time is displayed, the display turns off and the set is put back in the low power consumption standby mode.

If the sleep timer and everyday timer settings overlap, the sleep timer has priority.

Other Functions

Adjusting the Tone

1 Select the adjustment mode using [TONE].



2 With the name of the item to be adjusted selected, press [◀▶] to adjust the level.

[Selectable mode]

BASS :

Adjusts the bass sound (−10 dB to +10 dB).

TREBLE :

Adjusts the treble sound (−10 dB to +10 dB).

DEFEAT :

The tone adjustment circuitry can be bypassed to achieve high sound quality. "0dB"



If no operation is performed within 4 seconds, the display switches back to what was previously displayed.

Turning the Sound Off Temporarily (Muting)

Press [MUTE].



To cancel, either press [MUTE] again or adjust the volume using VOLUME.

Convenient Functions

Personal Memory Plus Function

This function sets the settings (input mode, surround mode, etc.) last selected for the individual input sources. When you switch to an input source, the settings are automatically set to the ones that were set the last time that input source was used.



The surround parameters, tone adjustment and the volumes of the different speakers are stored for the individual surround modes.

Last Function Memory

This stores the settings as they were directly before the standby mode was set.

When the power is turned back on, the settings are restored to as they were directly before the standby mode was set.

Backup Memory

The various settings are backed up for about 1 week, even if the power is turned off or the power cord is disconnected.

Auto Power On

When the power is in the standby mode, the power turns on simply by pressing [▶] or [◀].

Resetting the Microprocessor

Perform this procedure if the display is abnormal or if operations cannot be performed.

When the microprocessor is reset, all the settings are reset to their default values.

1 Set the standby mode using <ON/STANDBY>.

※ Set to the standby mode and wait 5 seconds.


2 Press <ON/STANDBY> while simultaneously pressing <FUNCTION> and [◀▶].

3 Release the three buttons when "INITIALIZE" is displayed.



If in step 3 the display does not flash at intervals of about 1 second, start over from step 1.

Remote Control Unit Operations

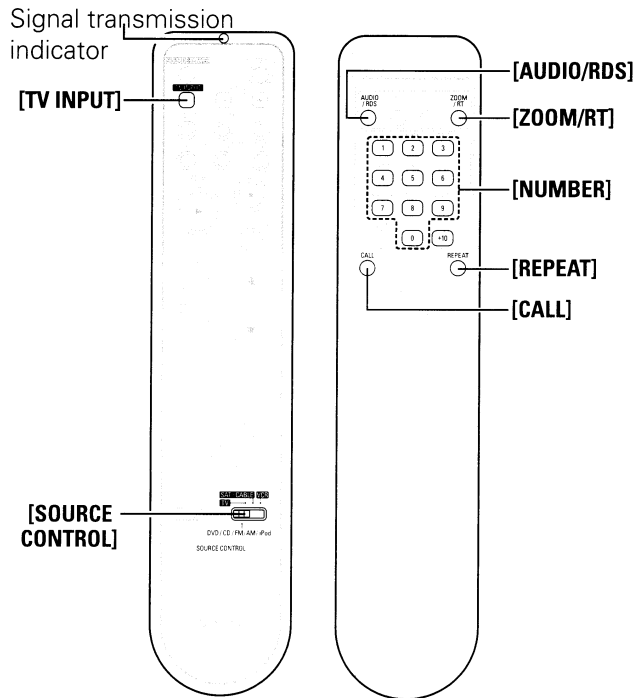

About the button names in these explanations

- < > : Buttons on the main unit
[] : Buttons on the remote control unit

Button name only:

Buttons on the main unit and remote control unit

Setting the preset memory function

DENON and other makes of components can be operated by setting the preset memory.

This remote control unit can be used to operate components of other manufacturers without using the learning function by registering the manufacturer of the component as shown in the list of preset codes (End of this manual).

1 Set **[SOURCE CONTROL]** to the component to be registered.

2 Press **[AUDIO/RDS]** and **[ZOOM/RT]** at the same time.

The indicator starts flashing.

3 Referring to the included list of preset codes (End of this manual), press **[NUMBER]** (0 ~ 9) to input the preset code (a 3-digit number) for the manufacturer of the component whose signals you want to store in the memory.

4 To store the codes of another component in the memory, repeat steps 2 to 3.



- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the remote control unit's transmitting window while setting the preset memory.
- Depending on the model and year of manufacture, this function cannot be used for some models, even if they are of makes listed in the list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and verify correct operation.
- Operation is not possible for some models.

Operating a component stored in the preset memory

1 Set **[SOURCE CONTROL]** to the component you want to operate.

2 Operate the component.

- ※ For details, refer to the component's operating instructions.
- ※ Some models cannot be operated with this remote control unit.

Setting the punch through function

"Punch Through" is a function allowing you to operate **[SOURCE CONTROL]** and **[TV INPUT]** on "TV", "SAT/CABLE" or "VCR" components when in the "DVD / CD / FM/AM / iPod" mode. By default, nothing is set.


1 Set **[SOURCE CONTROL]** to the component to be registered (DVD / CD / FM/AM / iPod).

2 Press **[CALL]** and **[REPEAT]** at the same time.

The indicator starts flashing.

3 Input the number of the component you want to set.

	Number
TV	1
SAT/CABLE	2
VCR	3
No setting	0

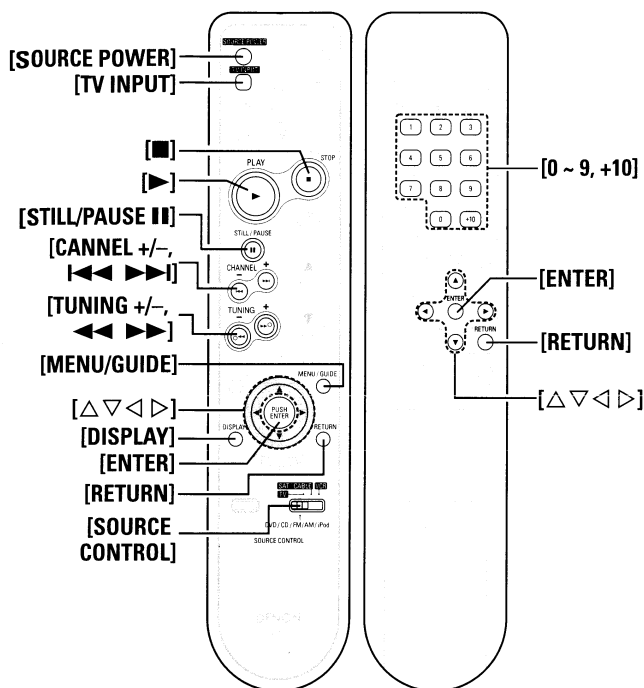

Functions of Buttons by Component

[Front]

Device operated	DVD/CD	iPod	TUNER	TV	Satellite Receiver, Cable TV	Video cassette recorder
SOURCE CONTROL	DVD / CD / FM/AM / iPod	DVD / CD / FM/AM / iPod	DVD / CD / FM/AM / iPod	TV	SAT/CABLE	VCR
SOURCE POWER	Punch through	Punch through	Punch through	Power on / off	Power on / off	Power on / off
TV INPUT	Punch through	Punch through	Punch through	Input mode selection	Input mode selection	Input mode selection
DISPLAY	Display	Display	–	Display	Display	–
▶	Playback	Playback	DVD/CD Playback Auto Preset (Hold)	–	–	Playback
■	Stop	–	–	–	–	Stop
STILL / PAUSE II	Still / Pause	Still / Pause	–	–	–	Pause
◀▶, CHANNEL +/-	Auto search (cue)	Auto search (cue)	Switch channels	Switch channels	Switch channels	Switch channels
◀▶, TUNING +/-	Manual search (fast-reverse/fast-forward)	Manual search (fast-reverse/fast-forward)	Tuning	–	–	Search (reverse, forward)
MENU/GUIDE	Menu / Guide	Menu	–	Menu / Guide	Menu	–
Δ ∇ ◁ ▷	Cursor	Cursor	Cursor	Cursor	Cursor	–
ENTER	Enter	Enter	Enter	Enter	Enter	–
RETURN	–	Browse/Remote	–	–	Return	–
Special remarks	①, ②	①, ②	①, ②	①	①	①

[Rear]

Device operated	DVD/CD	iPod	TUNER	TV	Satellite Receiver, Cable TV	Video cassette recorder
SOURCE CONTROL	DVD / CD / FM/AM / iPod	DVD / CD / FM/AM / iPod	DVD / CD / FM/AM / iPod	TV	SAT/CABLE	VCR
0 ~ 9, +10	Number input / Track selection	–	Channel selection	Channel selection	Channel selection	Channel selection
Δ ∇ ◁ ▷	Cursor	Cursor	Cursor	Cursor	Cursor	–
ENTER	Enter	Enter	Enter	Enter	Enter	–
RETURN	–	Browse/Remote	–	–	Return	–
Special remarks	①	①	①	①	①	①

[Special Remarks]

- ① Only one component can be preset for each mode. If a new code is preset, the previous code is automatically cleared.
- ② The TV, SAT/CABLE or VCR buttons can be assigned to a DVD, CD, FM/AM or iPod (page 34).

Other Information

Surround

The S-102 is equipped with a digital signal processing circuit that lets you play program sources in the surround mode to achieve the same sense of presence as in a movie theater.

Dolby Surround

Dolby Digital

Dolby Digital is a multichannel digital signal format developed by Dolby Laboratories.

A total of 5.1-channels are played: 3 front channels ("FL", "FR" and "C"), 2 surround channels ("SL" and "SR") and the "LFE" channel for low frequencies.

Because of this, there is no crosstalk between channels and a realistic sound field with a "three-dimensional" feeling (sense of distance, movement and positioning) is achieved.

A real, overpowering sense of presence is achieved when playing movie sources in AV rooms as well.

Dolby Pro Logic II


Dolby Pro Logic II is a matrix decoding technology developed by Dolby Laboratories.

Regular music such as that on CDs is encoded into 5-channels to achieve an excellent surround effect.

The surround channel signals are converted into stereo and full band signals (with a frequency response of 20 Hz to 20 kHz or greater) to create a "three-dimensional" sound image offering a rich sense of presence for all stereo sources.

※ Sources recorded in Dolby Surround

Sources recorded in Dolby Surround are indicated with the following logo marks.

Dolby Surround support mark : 

Manufactured under license from Dolby Laboratories.
"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

DTS Surround

DTS Digital Surround

DTS Digital Surround is the standard digital surround format of DTS, Inc., compatible with a sampling frequency of 44.1 or 48 kHz and up to 5.1-channels of digital discrete surround sound.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol and DTS Virtual are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.

Dolby Headphone

Dolby Headphone is a 3D sound technology developed jointly by Dolby Laboratories and Lake Technology of Australia achieving surround sound with regular headphones.

Dolby Headphone simulates speaker playback in a room and positions the sound sources to the front or the sides, outside of the head, achieving a powerful sound similar to that of a movie theater or home theater.

Dolby Virtual Speaker

Dolby Virtual Speaker technology uses proprietary technology of Dolby Laboratories to create a virtual surround sound field using only two speakers for the front channels, allowing the user to experience sound as if surround speakers were actually being used.

Features of Dolby Virtual Speaker sound

Accurate surround sound field positioning

The virtual surround speakers are positioned at 105° to the left and 105° to the right.

Multi-channel programs played according to the producer's intentions


Sound set at the rear left is heard from the rear left.

Stereo programs played in surround

The Dolby Pro Logic II circuit is used together with the Dolby Virtual Speaker circuitry to create a rich virtual surround sound field with stereo programs as well.

Selecting the listening mode

Two listening modes are provided: Reference and Wide.

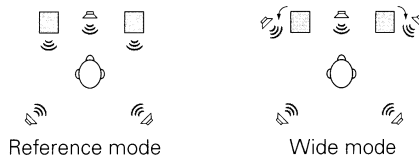

 : 2 front channels

 : Virtual sound field created with the Dolby Virtual Speaker mode

Surround Modes and Parameters

Surround Mode DVS: Dolby Virtual Speaker DHP: Dolby Headphone (H/P only)		Presence/absence of signals and controllability in the various modes								
		Channel output FRONT L/R SUB- WOOFER		Input signal per input source						
				DVD / AUX1						AUX1, 2 / TUNER / iPod / Portable
				DOLBY DIGITAL		DTS		PCM	ANALOG	
		2-channel	Multi channel	2-channel	Multi channel	2-channel	2-channel			
DVS	REFERENCE	○	○	● PLII	○	● PLII	○	● PLII	● PLII	
	WIDE	○	○	● PLII	○	● PLII	○	● PLII	● PLII	
DHP	DOLBY H/P	×	×	● PLII	○	● PLII	○	● PLII	● PLII	
	BYPASS	×	×	○	○ D.MIX	○	○ D.MIX	○	○	
STEREO		○	○	○	○ D.MIX	○	○ D.MIX	○	○	
ROCK ARENA		○	○	○	○	○	○	○	○	
JAZZ CLUB		○	○	○	○	○	○	○	○	

Surround Mode		Source	Surround parameter (default)			TONE CONTROL
			Cinema/ Music	D.COMP	LFE	
				DOLBY DIGITAL/DTS only		
DVS	REFERENCE		×	○ (OFF)	○ (0dB)	○ (OFF)
	WIDE		×	○ (OFF)	○ (0dB)	○ (OFF)
DHP	DOLBY H/P	Multich	×	○ (OFF)	○ (0dB)	○ (OFF)
		2ch	○ (CINEMA)	○ (OFF)	○ (0dB)	○ (OFF)
	BYPASS		×	○ (OFF)	○ (0dB)	○ (OFF)
STEREO			×	○ (OFF)	○ (0dB)	○ (OFF)
ROCK ARENA			×	○ (OFF)	○ (0dB)	○ (OFF)
JAZZ CLUB			×	○ (OFF)	○ (0dB)	○ (OFF)

- : Signal present or controllable.
 ● : Can be selected with 2-channel decode mode.
 × : No signal or not controllable.
 D.MIX : Compatible with down-mixing.
 PLII : Compatible with PLII processing.

Video output table

	INPUT	OUTPUT	VIDEO	S-video	Component		HDMI
					480i/576i	480p/576p	
	DVD/CD	Interlaced	○	○	○	×	×
		Progressive	×	×	×	○	×
		HDMI	○	○	×	×	○
	TUNER		×	×	×	×	×
	AUX1	VIDEO	○	×	×	×	×
		S-video	×	○	×	×	×
	AUX2	VIDEO	○	×	×	×	×
		S-video	×	○	×	×	×
	Front in		×	×	×	×	×
	iPod		○	○	×	×	×

Progressive Scan Circuit "DCDi™"

"DCDi™" is trademark of Faroodja, a division of Genesis Microchip Inc.

The S-102 is equipped with a high precision Progressive Scan circuit "DCDi™" allowing it to reproduce movies and other images on DVDs with a quality near that of the original.

AL24 Processing (Stereo mode only)

AL24 Processing has inherited the technology of the original ALPHA Processing that was used in DENON's highly-successful reference-class audio components.

AL24 Processing further reduces quantization distortion and represents the ultimate analog waveform reproduction technology designed to support the higher numbers of bits and higher sampling.

AL24 Processing senses the nature of the digital data being input and interpolates the data so that it faithfully replicates the original analog waveform. AL24 processing operates when CD, MP3 or WMA data is inputted.

HDCD® (High Definition Compatible Digital®) (Stereo mode only)

HDCD® is an encoding/decoding technology that greatly reduces the distortion that occurs upon digital recording while maintaining compatibility with the conventional CD format, thus expanding the dynamic range and achieving a high resolution.

Conventional CDs and HDCD compatible CDs are identified automatically to select the optimum digital processing.

HDCD®, HDCD®, High Definition Compatible Digital® and Microsoft® are either registered trademarks or trademarks of Microsoft Corporation, Inc. in the United States and/or other countries. HDCD system manufactured under license from Microsoft Corporation, Inc. This product is covered by one or more of the following: In the USA: 5,479,168, 5,638,074, 5,640,161, 5,808,574, 5,838,274, 5,854,600, 5,864,311, 5,872,531, and in Australia: 669114. Other patents pending.

Audyssey Dynamic EQ.

Audyssey Dynamic EQ. is a technology that automatically corrects the tonal balance of an audio system when the volume is changed. It is based on psychoacoustic research that better matches to human perception than other loudness compensation that was used before. The tonal balance is adjusted continuously with variation in both program material and volume setting.

Audyssey BassXT

Audyssey BassXT is a solution to extend bass performance to lower frequencies without increasing cabinet size, driver size or weight. BassXT actively monitors the incoming low frequency signal and drives subwoofers to their maximum capability at all volumes, thereby producing deeper bass at all volume levels. This allows the subwoofer to play low bass content when it can and protects it only for the few times when it can't. It is not like simple bass boost or tone control as the system is fully customized for each speaker design by DSP processing and works in real time.

Manufactured under license from Audyssey Laboratories, Inc. U.S. and foreign patents pending.
Audyssey BassXT™ and Audyssey Dynamic EQ™ are trademarks of Audyssey Laboratories, Inc.

Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner's manual?
3. Are the other components operating properly?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

[General]

Symptom	Cause	Countermeasure	Page
Display not lit and sound not produced when power switch set to on.	• Power cord not plugged in securely.	• Check the insertion of the power cord plug.	10
Display lit but sound not produced.	• Speaker cables not securely connected.	• Connect securely.	10
	• Device you want to play and set input source do not match.	• Select an appropriate input source.	20
	• Volume control set to minimum.	• Turn volume up to suitable level.	20
	• MUTING is on.	• Switch off MUTING.	31
	• Digital signals not input Digital input selected.	• Input digital signals or select input terminal to which digital signals are being input.	12
Monitor does not display an image.	• Connections between the video output terminal of this unit and the input connector of the monitor are incomplete.	• Check whether the connections are correct.	11
	• The input setting of the monitor TV is different.	• Set the input switching of the TV to the terminal to which the video input is connected.	12
When the subwoofer indicator has lit.	• The subwoofer and main unit are not properly connected with the system cable.	• Check whether or not the cable is properly connected. If the indicator lights even though the cable is properly connected, there may be a malfunction.	10

Symptom	Cause	Countermeasure	Page
Power turns off suddenly and power indicator flashes red.	• Protection circuit activated due to rise of internal temperature.	• Turn off the power, wait for the set to fully cool down, then turn the power back on.	10
		• Place the set in a well-ventilated place.	10
	• Core wires of two speakers are touching each other or a core wire is sticking out of the terminal and touching the set's rear panel, activating the protection circuit.	• First unplug the power cord, then twist the core wires tightly or terminate the speaker cables, then reconnect.	9, 10
	• Set is damaged.	• Turn off the power and contact a DENON service center.	—

[Remote Control Unit]

Symptom	Cause	Countermeasure	Page
Set does not work properly when remote control unit operated.	• Batteries are worn.	• Replace with new batteries.	5
	• You are operating outside of the specified range.	• Operate within the specified range.	5
	• Obstacle between main unit and remote control unit.	• Remove the obstacle.	5
	• The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment.	• Insert the batteries in the proper direction, following the polarity marks in the battery compartment.	5
	• The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.).	• Move the set to a place in which the remote control sensor will not be exposed to strong light.	5
	• SOURCE CONTROL switch position is different.	• Set the SOURCE CONTROL switch for the device you wish to use.	8

[DVD]

Symptom	Countermeasure	Page
Playback does not start when ► button is pressed. Playback stops immediately.	<ul style="list-style-type: none"> Is there condensation on the disc or player ? (Let stand for 1 or 2 hours.) Discs other than DVDs and music CDs cannot be played. Disc is dirty. Wipe off the dirt. 	<p>–</p> <p>4</p> <p>5</p>
Picture is disturbed during the search operation.	<ul style="list-style-type: none"> Some disturbance is normal. 	–
Buttons do not operate.	<ul style="list-style-type: none"> Some operations are disabled for some discs. 	–
No subtitles are displayed.	<ul style="list-style-type: none"> Subtitles are not displayed for DVDs not containing subtitles. Subtitles are turned off. Turn the subtitles setting on. 	<p>–</p> <p>15</p>
Audio (or subtitle) language does not switch.	<ul style="list-style-type: none"> The audio (or subtitle) language does not switch for discs which do not include multiple audio (or subtitle) languages. For some discs the audio (or subtitle) language cannot be switched when the operation to switch it is performed, but can be switched on the menu screens. 	<p>–</p> <p>–</p>
Angle does not switch.	<ul style="list-style-type: none"> The angle cannot be switched for DVDs which do not contain multiple angles. In some cases multiple angles are only recorded for specific scenes. 	–
Playback does not start when the title is selected.	<ul style="list-style-type: none"> Check the "RATINGS" setting. 	18
The password for rating level has been forgotten. Reset all the DVD setting to Factory Preset.	<ul style="list-style-type: none"> Initialize using the procedure described at "Resetting the Microprocessor". 	31
The disc is not played with the audio or subtitle language set as the default setting.	<ul style="list-style-type: none"> The disc does not play with the selected audio or subtitle language if that audio or subtitle language is not included on that DVD. 	–
Picture is not displayed in 4:3 (or 16:9).	<ul style="list-style-type: none"> At the menu's "TV ASPECT" setting, select "4:3LB/4:3PS/WIDE (16:9)" and set according to the TV you are using. 	16

Symptom	Countermeasure	Page
Menu screen messages for the desired language do not display.	<ul style="list-style-type: none"> Check the default setting for the disc language's menu language. 	15

[Audio]

Symptom	Cause	Countermeasure	Page
No sound is output from the monitor connected with HDMI connections.	<ul style="list-style-type: none"> HDMI audio signal output destination setting is wrong. 	<ul style="list-style-type: none"> Set to "VIDEO SETUP" – "HDMI SETUP" – "HDMI AUDIO OUT" – "ON". 	16

[Tuner]

Symptom	Cause	Countermeasure	Page
Continuous noise is heard when receiving FM programs	<ul style="list-style-type: none"> Antenna cable is not properly connected. 	<ul style="list-style-type: none"> Connect the antenna cable properly. Connect an outdoor antenna. 	13
Hissing or continuous noise is heard when receiving AM programs	<ul style="list-style-type: none"> This may be noise from a TV or interference from a radio station. 	<ul style="list-style-type: none"> Turn off the TV. Change the position and direction of the AM loop antenna. 	3

[iPod]

Symptom	Cause	Countermeasure	Page
iPod cannot be played.	<ul style="list-style-type: none"> The input source assigned to "iPod Assign" is not selected. Cable is not properly connected. Control Dock for iPod's AC adapter is not connected to power outlet. 	<ul style="list-style-type: none"> Switch to the input source assigned at "iPod". Reconnect. Plug the Control Dock for iPod's AC adapter into a power outlet. 	29 12 —
iPod slide show is not output to the TV.	—	<ul style="list-style-type: none"> Set the iPod slide show correctly. See your iPod user's manual for more details on how to operate. 	—

[Video]

Symptom	Cause	Countermeasure	Page
The on-screen display does not appear.	<ul style="list-style-type: none"> The format of the TV (NTSC or PAL) do not match. 	<ul style="list-style-type: none"> Match the format of the TV. 	16
No picture appears.	<ul style="list-style-type: none"> The connections between the S-102 and monitor are faulty. The monitor's input setting is wrong. 	<ul style="list-style-type: none"> Check the connections. Set properly. 	11 —
No picture appears with HDMI connections.	<ul style="list-style-type: none"> The connections to the HDMI connectors are faulty. The monitor is not compatible with copyright protection (HDCP). 	<ul style="list-style-type: none"> Check the connections. Connect a monitor that is compatible with copyright protection (HDCP). 	11 11
DVDs cannot be copied on a VCR.	—	<ul style="list-style-type: none"> This is not a malfunction. Most movie software includes copy prevention signals and cannot be copied. 	—

Specifications

Audio section

• Analog

Input sensitivity / Input impedance: 140 mV/47 kΩ/kohms

Tuner section

Reception frequency range: FM: 87.50 MHz ~ 107.90 MHz AM: 530 kHz to 1710 kHz
Receiving sensitivity: FM: 1.5 μV/75 Ω/ohms AM: 20 μV
FM stereo separation: 35 dB (1 kHz)

Video section

• Standard video connectors

Input / output level and impedance: 1 Vp-p, 75 Ω/ohms

• S-Video connectors

Input / output level and impedance: Y (brightness) signal — 1 Vp-p, 75 Ω/ohms
 C (color) signal — 0.286 Vp-p, 75 Ω/ohms

• Color component video connector

Input / output level and impedance: Y (brightness) signal — 1 Vp-p, 75 Ω/ohms
 P_B / C_B signal — 0.7 Vp-p, 75 Ω/ohms
 P_R / C_R signal — 0.7 Vp-p, 75 Ω/ohms
 Pin connector : 1 set/S-Video connector : 1 set/
 Component video connector : 1 set

DVD section

Signal format:

Supported discs:

NTSC/PAL
 (1) DVD-VIDEO discs
 12 cm single side 1 layer, 12 cm single side 2 layers,
 12 cm both sides 2 layers (single side 1 layer),
 8 cm single side 1 layer, 8 cm single side 2 layers,
 8 cm both sides 2 layers (single side 1 layer)
 (2) Compact Disc (CD-DA)
 12 cm discs, 8 cm discs

Clock/Timer section

Clock method:

Timer:

Power line frequency synchronized method
 Everyday/Once timer: One system each
 Sleep timer: 120 minutes, maximum

General

Power supply:

Power consumption:

120 V AC, 60 Hz

51 W

0.3 W (standby)

Maximum external dimensions:

380 (W) x 93 (H) x 293 (D) mm (14-61/64" x 3-21/32" x 11-17/32")
 (ADV-S102) (including system cable)

Weight:

3.8 kg (8 lbs 6 oz) (ADV-S102)

Remote control unit (RC-1073)

Remote control method:

Power supply:

Maximum external dimensions:

Weight:

IR pulse method

R6/AA Type (two batteries)

52 (W) x 243 (H) x 19 (D) mm (2-3/64" x 9-9/16" x 13/16")

175 g (Approx. 6 oz) (including batteries)

Speakers

• Speaker system

Type:

Maximum external dimensions:

Weight:

• Subwoofer

Type:

Maximum external dimensions:

Weight:

SC-S102

2-way, 2-speakers, Closed box / Low-leakage-flux

8 cm cone bass-mid x 1 / 2.5 cm high range x 1

103 (W) x 258 (H) x 76 (D) mm (4-3/64" x 10-5/32" x 2-63/64")

2.0 kg (4 lbs 14 oz) (per unit)

DSW-S102

1-way, 1-speaker, Reflex box / Low-leakage-flux / Built-in amplifier

16 cm cone x 1

212 (W) x 378 (H) x 408 (D) mm (8-11/32" x 14-7/8" x 16-1/16")

(including foot)

10.5 kg (23 lbs 2 oz) (including base)

※ For purposes of improvement, specifications and design are subject to change without notice.

※ This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

List of preset codes / Liste de codes prééglés /Lista de códigos pre-ajustados

DVD Player

A	Aiwa	009
D	Denon	014, *[111]
H	Hitachi	010
J	JVC	006, 011
K	Konka	012, 013
M	Magnavox	005
	Mitsubishi	004
P	Panasonic	014
	Philips	005, 015, 016, 017
	Pioneer	003, 008
S	Sanyo	018
	Sony	002, 019, 020
T	Toshiba	001, 021, 022
Z	Zenith	023

VDP

D	Denon	028, 029, 112
M	Magnavox	026
	Mitsubishi	028
P	Panasonic	029, 030
	Philips	026
	Pioneer	028, 031
R	RCA	032
S	Sony	033, 034, 035, 036

VCR

A	Admiral	081
	Aiko	095
	Aiwa	009
	Akai	026, 027, 070, 072, 082, 083, 084
	Alba	055
	Amstrad	009
	ASA	042
	Asha	087
	Audio Dynamic	005, 085
	Audiovox	088
B	Beaumarck	087
	Broksonic	086, 093
C	Calix	088
	Candle	006, 087, 088, 089, 090
	Canon	049, 057
	Capehart	025, 055, 056, 071
	Carver	015
	CCE	095

	Citizen	006, 007, 087, 088, 089, 090, 095
	Craig	007, 087, 088, 091, 115
	Curtis Mathes	006, 049, 073, 080, 087, 090, 092
	Cybernex	087
D	Daewoo	025, 055, 059, 074, 089, 093, 095, 096
	Daytron	025, 055
	DBX	005, 085
	Dumont	053
	Dynatech	009
E	Electrohome	001, 088, 097
	Electrohome	088
	Emerson	001, 009, 017, 027, 086, 088, 089, 092, 093, 097, 100, 101, 102, 103, 104, 117
	Fisher	009, 028, 031, 053, 054, 091, 099, 115
G	GE	007, 011, 049, 050, 051, 052, 073, 080, 087
	Go Video	047, 048
	Goldstar	000, 006, 012, 062, 088
	Gradiente	094
	Grundig	042
H	Harley Davidson	094
	Harman Kardon	040, 062
	Hi-Q	091
	Hitachi	009, 013, 023, 026, 058, *[108], 109, 110, 111
J	JC Penny	004, 005, 007, 023, 028, 049, 062, 085, 087, 088
	Jensen	013, 026
	JVC	004, 005, 006, 026, 029, 043, 044, 045, 046, 085
K	Kenwood	004, 005, 006, 026, 029, 033, 045, 085, 090
	Kodak	088
L	Lloyd	009, 094
	LXI	088
M	Magnavox	015, 016, 042, 049, 063, 106
	Magnin	087
	Marantz	004, 005, 006, 015, 042, 049, 085, 090
	Marta	088
MEI		049
	Memorex	009, 033, 049, 053, 060, 081, 087, 088, 091, 094, 115
	Metz	123, 124, 125, 126, 127, 128
	MGA	001, 017, 027, 041, 097
	MGN Technology	087
	Midland	011
	Minolta	013, 023

	Mitsubishi	001, 003, 008, 013, 014, 017, 027, 029, 039, 040, 041, 045, 097
	Motorola	081
	Montgomery Ward	001, 002, 007, 009, 049, 063, 081, 115, 117
	MTC	009, 087, 094
	Multitech	007, 009, 011, 087, 090, 094
N	NAD	038
	NEC	004, 005, 006, 018, 026, 029, 045, 061, 062, 085
	Nikko	088
	Noblex	087
O	Optimus	081, 088
	Optonica	021
P	Panasonic	024, 049, 064, 066, 067, 068, 069, 107
	Perdio	009
	Pentax	009, 013, 023, 058, 090
	Philco	015, 016, 049
	Philips	015, 021, 042, 049, 105
	Pilot	088
	Pioneer	005, 013, 029, 036, 037, 038, 045, 085
	Portland	025, 055, 090
	Proscan	063, 080
	Pulsar	060
Q	Quartz	033
	Quasar	034, 035, 049
R	Radio Shack	001, 002, 021, 081, 087, 088, 091, 094, 097, 098, 115
	Radix	088
	Randex	088
	RCA	007, 013, 019, 023, 058, 063, 064, 065, 073, 080, 082, 087
	Realistic	009, 021, 031, 033, 049, 053, 081, 087, 088, 091, 094, 097, 098
	Ricoh	055
S	Salora	033, 041
	Samsung	007, 011, 051, 059, 070, 083, 087, 089, 113
	Sanky	081
	Sansui	005, 026, 029, 045, 061, 085, 114
	Sanyo	032, 033, 053, 087, 091, 115, 116
	SBR	042
	Scott	017, 020, 086, 089, 093, 117
	Sears	013, 023, 028, 031, 033, 053, 054, 088, 091, 098, 099, 115
	Sentra	055
	Sharp	001, 002, 021, 097

	Shogun	087
	Sony	075, 076, 077, 078, 079, 121, 122
	STS	023
	Sylvania	009, 015, 016, 017, 041, 049, 094
	Symphonic	009, 094
T	Tandy	009
	Tashiko	009, 088
	Tatung	004, 026, 030
	Teac	004, 009, 026, 094
	Technics	024, 049
	Teknika	009, 010, 022, 049, 088, 094
	TMK	087, 092
	Toshiba	013, 017, 020, 041, 059, 089, 098, 099, 117
	Totevision	007, 087, 088
U	Unirech	087
V	Vectur Research	005, 062, 085, 089, 090
	Victor	005, 045, 046, 085
	Video Concepts	005, 027, 085, 089, 090
	Videosonic	007, 087
W	Wards	013, 021, 023, 087, 088, 089, 091, 094, 097, 118, 119, 120
X	XR-1000	094
Y	Yamaha	004, 005, 006, 026, 062, 085
Z	Zenith	060, 078, 079

Television

A	Admiral	045, 121
	Adventura	122
	Aiko	054
	Akai	016, 027, 046
	Alleron	062
	A-Mark	007
	Amtron	061
	Anam	006, 007, 036
	Anam National	061, 147
	AOC	003, 007, 033, 038, 039, 047, 048, 049, 133
	Archer	007
	Audiovox	007, 061
B	Bauer	155
	Belcor	047
	Bell & Howell	045, 118
	Bradford	061
	Brockwood	003, 047
C	Candle	003, 030, 031, 032, 038, 047, 049, 050, 122
	Capehart	003

	Celebrity	046
	Circuit City	003
	Citizen	029, 030, 031, 032, 034, 038, 047, 049, 050, 054, 061, 095, 122, 123
	Concerto	031, 047, 049
	Colortyme	003, 047, 049, 135
	Contec	013, 051, 052, 061
	Cony	051, 052, 061
	Craig	004, 061
	Crown	029
	Curtis Mathes	029, 034, 038, 044, 047, 049, 053, 095, 118
D	Daewoo	027, 029, 039, 048, 049, 054, 055, 106, 107, 137
	Daytron	003, 049
	Dimensia	044
	Dixi	007, 015, 027
E	Electroband	046
	Electrohome	029, 056, 057, 058, 147
	Elta	027
	Emerson	029, 051, 059, 060, 061, 062, 118, 123, 124, 139, 148
	Envision	038
	Etron	027
F	Fisher	014, 021, 063, 064, 065, 118
	Formenti	155
	Fortress	012
	Fujitsu	004, 062
	Funai	004, 062
	Futurtech	004
G	GE	020, 036, 037, 040, 044, 058, 066, 088, 119, 120, 125, 147
	Goldstar	000, 015, 029, 031, 039, 048, 051, 056, 057, 067, 068, 069, 116
	Grundy	062
H	Hitachi	029, 031, 051, 052, 070, 111, 112, 113, 124, *[134]
	Hitachi Pay TV	151
I	Infinity	017, 071
J	Janeil	122
	JBL	017, 071
	JC Penny	020, 034, 039, 040, 041, 044, 048, 050, 058, 066, 069, 076, 088, 090, 095, 125, 136, 159
	JCB	046
	JVC	019, 051, 052, 072, 073, 091, 117, 126
K	Kawasho	018, 046
	Kenwood	038, 056, 057
	Kloss	010, 032
	Kloss Novabeam	005, 122, 127, 131
	KTV	074, 123

L	Loewe	071
	Logik	144
	Luxman	031
	LXI	008, 014, 017, 024, 040, 044, 063, 071, 075, 076, 077, 118, 125
M	Magnavox	005, 010, 017, 030, 033, 038, 050, 056, 071, 078, 079, 085, 089, 108, 109, 110, 127, 131, 132, 145
	Marantz	015, 017, 071, 080
	Matsui	027
	Memorex	014, 027, 045, 083, 118, 144
	Metz	160, 161, 162, 163
	MGA	001, 039, 048, 056, 057, 058, 065, 081, 083
	Midland	125
	Minutz	066
	Mitsubishi	001, 016, 039, 048, 056, 057, 058, 065, 081, 082, 083, 105
	Montgomery Ward	011, 020, 144, 145, 146
	Motorola	121, 147
	MTC	031, 034, 039, 048, 095
N	NAD	008, 075, 076, 128
	National	002, 036, 061, 147
	National Quenties	002
	NEC	031, 038, 039, 048, 057, 084, 086, 135, 147
	Nikko	054
	NTC	054
O	Optimus	128
	Optonica	011, 012, 093, 121
	Orion	004, 139
P	Panasonic	002, 009, 017, 036, 037, 071, 141, 143, 147
	Philco	005, 010, 030, 050, 051, 056, 079, 085, 127, 131, 132, 145, 147
	Philips	005, 015, 017, 050, 051, 056, 078, 087, 088, 089, 131, 132, 147
	Pioneer	124, 128, 142
	Portland	054
	Price Club	095
	Proscan	040, 044, 125
	Proton	035, 051, 092, 129
	Pulsar	042
Q	Quasar	036, 037, 074, 141
R	Radio Shack	011, 044, 063, 093, 118
	RCA	040, 044, 125, 130, 137, 151, 152
	Realistic	014, 063, 093, 118
S	Saisho	027
	Samsung	003, 015, 034, 053, 055, 057, 094, 095, 136, 153
	Sansui	139
	Sanyo	013, 014, 021, 022, 063, 064, 081, 096
	SBR	015

	Schneider	015
	Scott	062
		008, 014, 021, 022, 023, 024, 025, 040, 052, 057, 062, 063, 064, 065, 073, 075, 076, 097, 098, 125, 159
	Sears	011, 012, 013, 026, 093, 099, 100, 104, 121
	Sharp	
	Siemens	013
	Signature	045, 144
	Simpson	050
	Sony	043, 046, 138, 146, 150
	Soundesign	030, 050, 062
	Spectricon	007, 033
	Squareview	004
	Supre-Macy	032, 122
	Supreme	046
		005, 010, 017, 030, 078, 079, 085, 089, 101, 127, 131, 132, 145, 155
	Sylvania	004, 148
	Symphonic	004, 148
T	Tandy	012, 121
	Tatung	036, 124
	Technics	037
	Teknika	001, 030, 032, 034, 052, 054, 078, 083, 095, 144, 156, 157
	Tera	035, 129
	THOMSON	165, 166
	Toshiba	008, 014, 034, 063, 075, 076, 095, 097, 136, 158, 159
U	Universal	020, 066, 088
V	Victor	019, 073, 126
	Video Concepts	016
	Viking	032, 122
		005, 045, 066, 078, 085, 088, 089, 093, 102, 103, 131, 132, 148
W	Wards	042, 114, 115, 140, 144, 149
Z	Zenith	007
	Zonda	007

CABLE

A	ABC	006, *[007], 008, 009
	Archer	010, 011
C	Century	011
	Citizen	011
	Colour Voice	012, 013
	Comtronic	014
E	Eastern	015
G	Garrard	011
	Gemini	030, 033, 034
	General Instrument	030, 031, 032
H	Hytex	006
J	Jasco	011
	Jerrold	009, 016, 017, 026, 032
M	Magnavox	018

	Movie Time	019
N	NSC	019
O	Oak	000, 006, 020
P	Panasonic	001, 005
	Philips	011, 012, 013, 018, 021
	Pioneer	002, 003, 022
R	RCA	029
	Regency	015
S	Samsung	014, 023
	Scientific Atlanta	004, 024, 025
	Signal	014
	SL Marx	014
	Starcom	009
	Stargate	014
T	Televiow	014
	Tocom	007, 016
	TV86	019
U	Unika	011
	United Artists	006
	Universal	010, 011
V	Viewstar	018, 019
Z	Zenith	027, 028

Satellite Receiver

A	Alphastar	054
C	Chaparral	035, 036
D	Dishnet	053
	Drake	037, 038
E	Echostar Dish	062, 066
G	GE	048, 055, 056
	General Instruments	039, 040, 041
	Grundig	070, 071, 072, 073
H	Hitachi	058, 059
	Hughes Network	063, 064, 065, 069
	JVC	057
J	Kathrein	074, 075, 076, 083
K	Magnavox	060
M	Nokia	070, 080, 084, 085, 086
N	Philips	060
P	Primestar	051
	Proscan	048, 055, 056
R	RCA	048, 055, 056, 068
	Realistic	042
S	Sierra I	036
	Sierra II	036
	Sierra III	036
	Sony	049, 067
	STS1	043
	STS2	044
	STS3	045
	SRS4	046

T	Technisat	077, 078, 079, 081, 082
	Toshiba	047, 050
U	Uniden	061

CD Player

A	Aiwa	001, 035, 043
B	Burmster	002
C	Carver	003, 035
D	Denon	*[111], 044
E	Emerson	004, 005, 006, 007
F	Fisher	003, 008, 009, 010
J	JVC	018, 019
K	Kenwood	011, 012, 013, 014, 017
M	Magnavox	006, 015, 035
	Marantz	016, 028, 035
	MCS	016, 024
O	Onkyo	025, 027
	Optimus	017, 020, 021, 022, 023
P	Philips	014, 032, 033, 035
	Pioneer	006, 022, 030
S	Sears	006
	Sony	023, 031
T	Teac	002, 009, 028
	Technics	016, 029, 036
W	Wards	035, 037
Y	Yamaha	038, 039, 040, 041
Z	Zenith	042

CD Recorder

D	Denon	*[111], 112
P	Philips	112

MD

D	Denon	113
K	Kenwood	003, 004
O	Onkyo	007
S	Sharp	005
	Sony	006

TAPE

A	Aiwa	001, 002
C	Carver	002
D	Denon	*[111]
H	Harman/Kardon	002, 003
J	JVC	004, 005
K	Kenwood	006
M	Magnavox	002
	Marantz	002
O	Onkyo	016, 018

	Optimus	007, 008
P	Panasonic	012
	Philips	012
	Pioneer	007, 008, 009
S	Sony	013, 014, 015
T	Technics	012
V	Victor	004
W	Wards	007
Y	Yamaha	010, 011

[]*: Preset codes set upon shipment from the factory.

: Sie Voreinstellungscodes wurden vor der Auslieferung werkseitig eingestellt.

: Les codes prééglés diffèrent en fonction des livraisons de l'usine.

: I codici di presettaggio sono impostati in fabbrica prima della consegna.

: Los códigos vienen preprogramados de fábrica.

: Vooringestelde codes bij het verlaten van de fabriek.

: Förinställda koder har ställts in vid transporten från fabriken.

DVD preset codes DVD-Voreinstellungscodes Codes prééglés DVD Codici di preselezione DVD Códigos de preajuste de DVD DVD-voorkeuzecodes Förinställda DVD-koder		
DENON	111	014
Model No.	DVD-550	DVD-800
Modellnr	DVD-700	DVD-1600
Modèle numéro	DVD-900	DVD-2000
Modello No	DVD-1000	DVD-2500
Nº de modelo	DVD-1400	DVD-3000
Modellnr	DVD-1500	DVD-3300
Modellnr	DVD-1710	
	DVD-1910	
	DVD-2200	
	DVD-2800	
	DVD-2800II	
	DVD-2900	
	DVD-2910	
	DVD-3800	
	DVD-3910	
	DVD-A11	
	DVD-A1	
	DVD-A1XV	




DENON

www.denon.com



Denon Brand Company, D&M Holdings Inc.
Printed in China 00D 511 4646 009

DENON


S-102

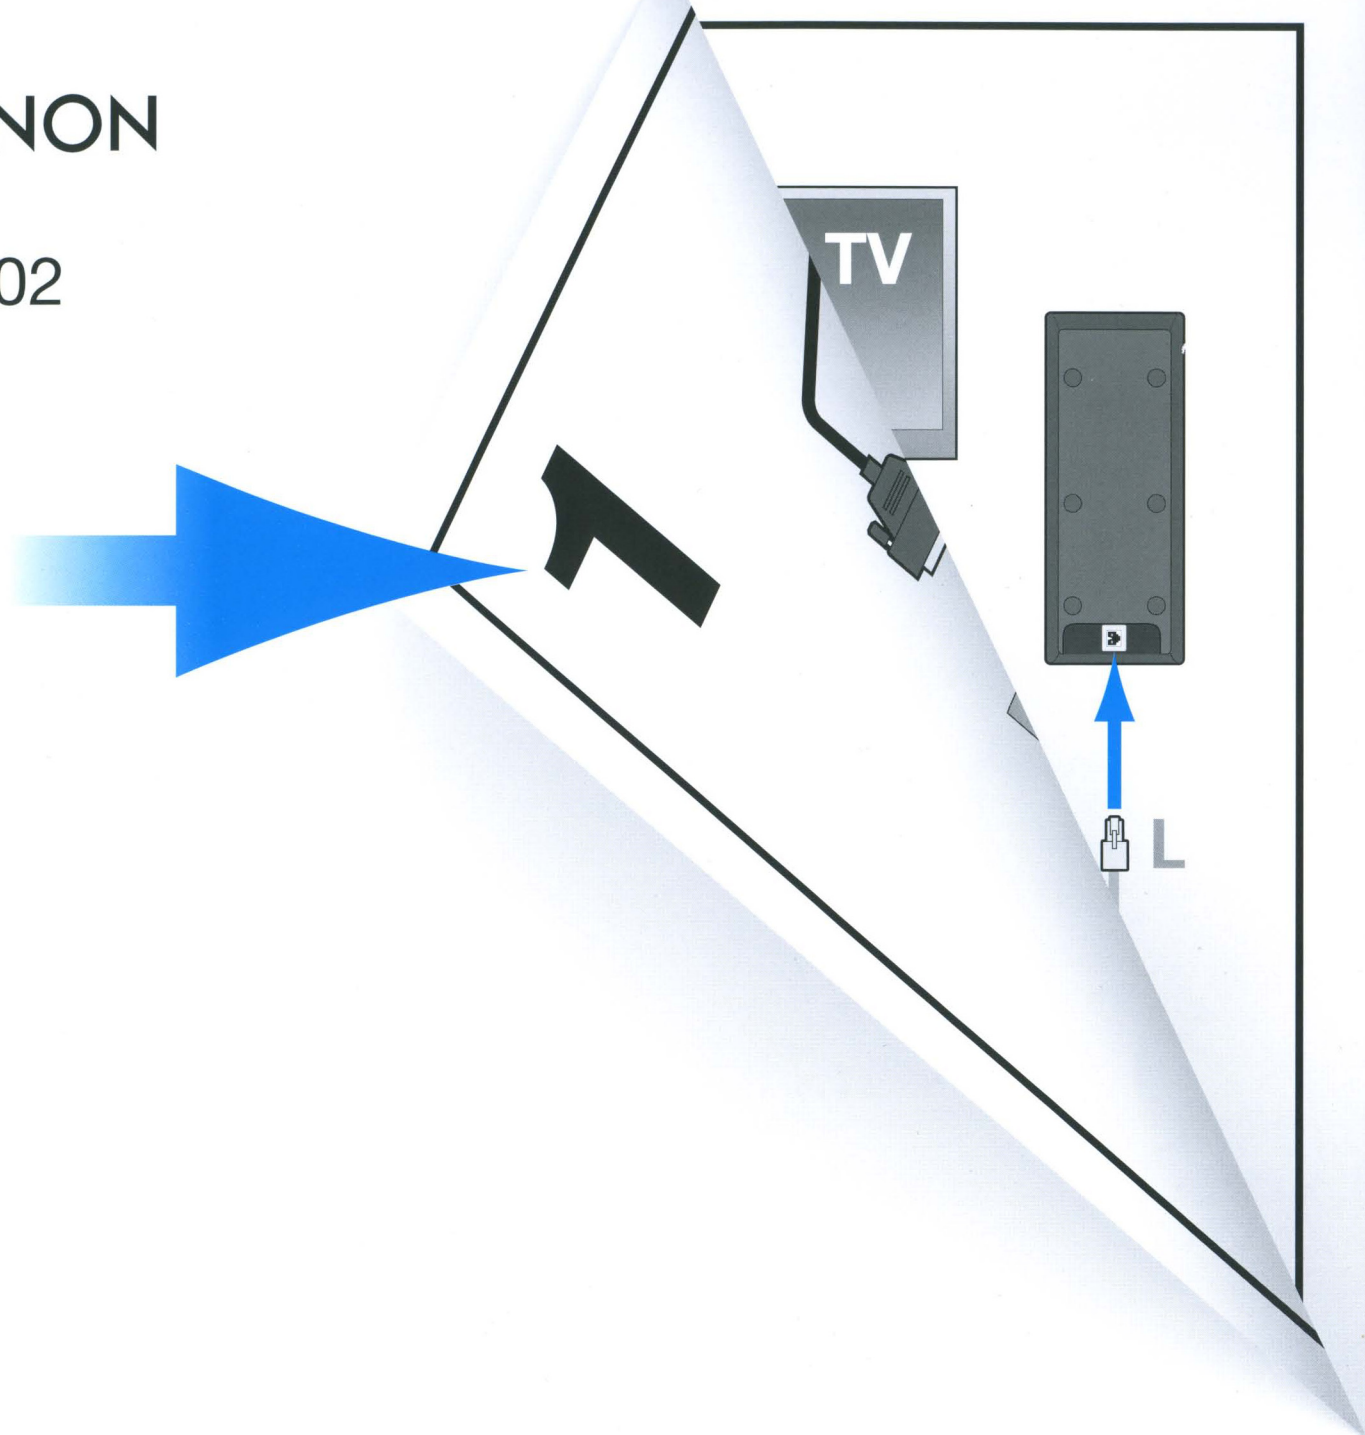


1

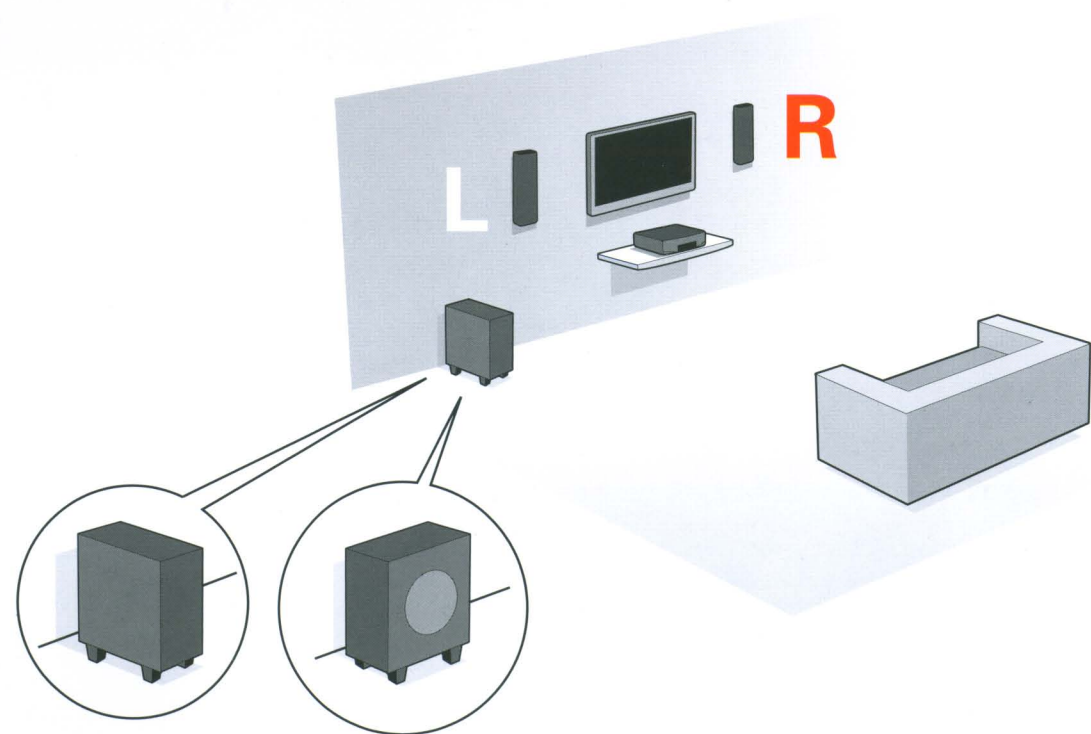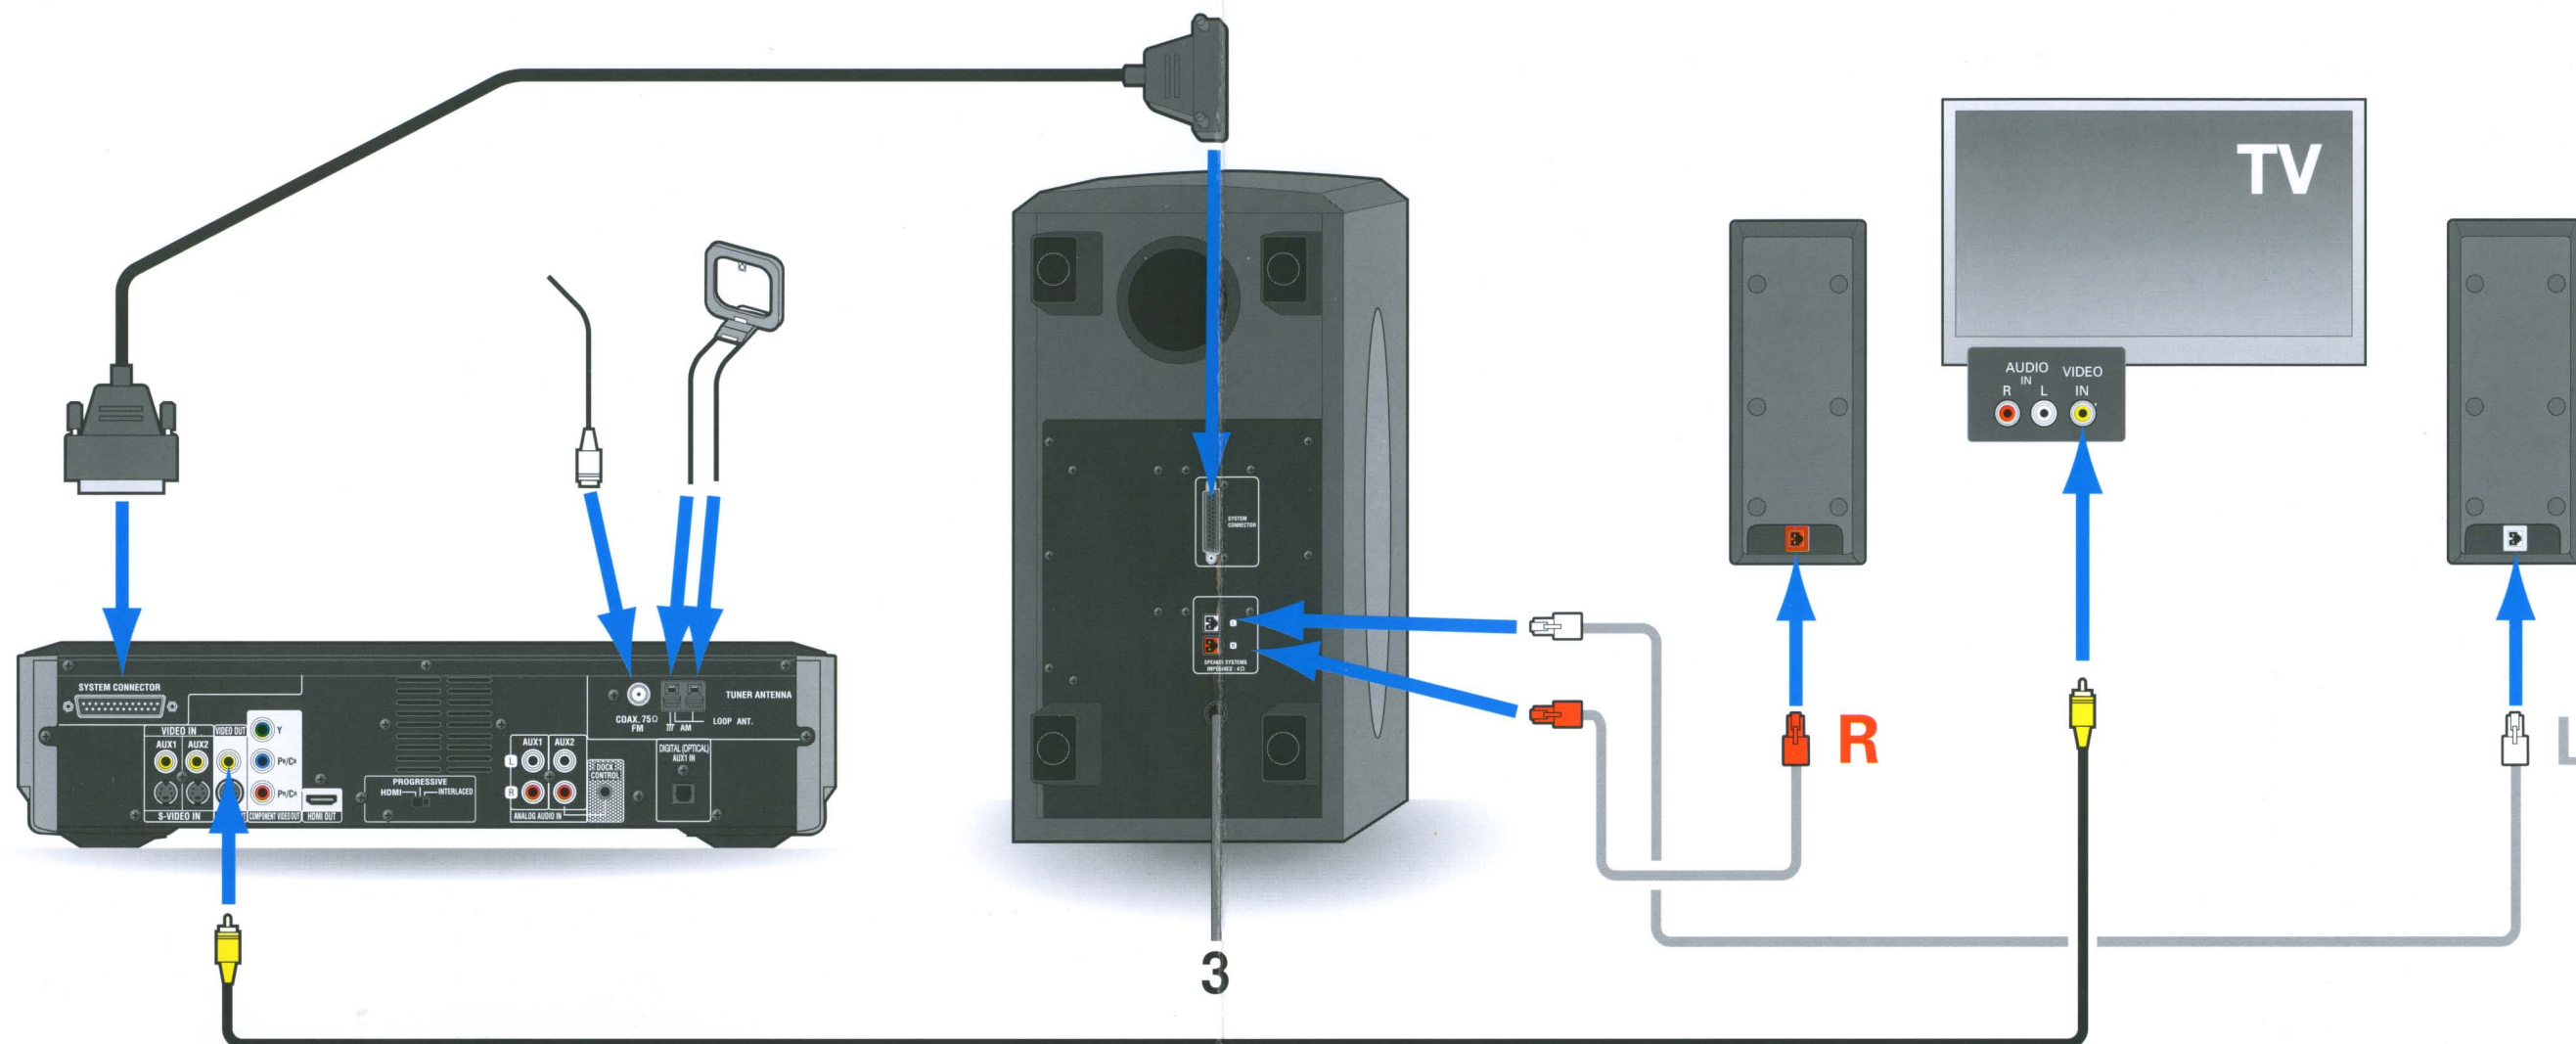



2

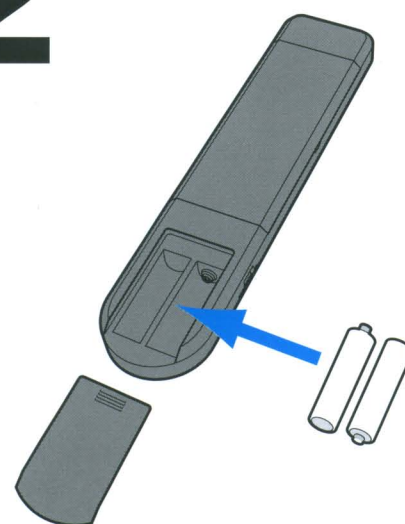


3

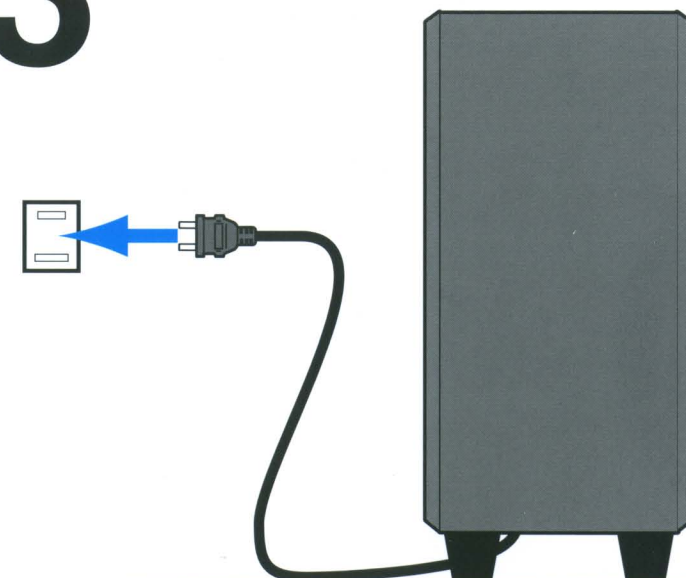


4

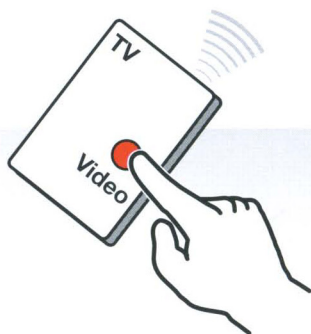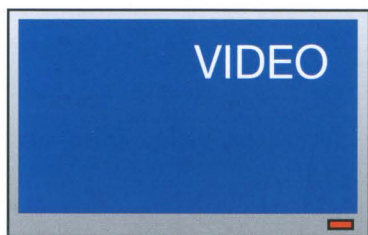



5

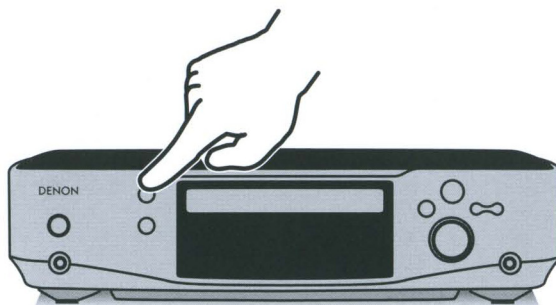

6

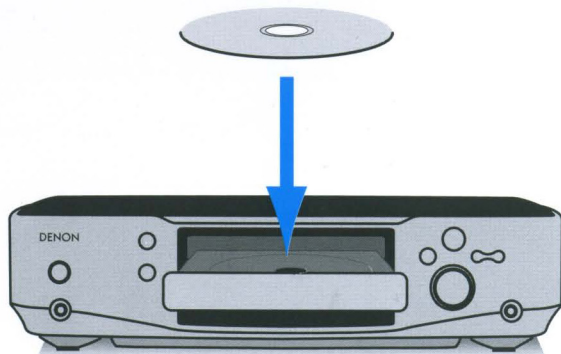

7

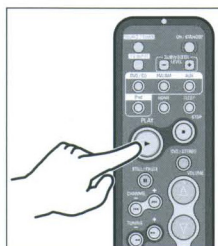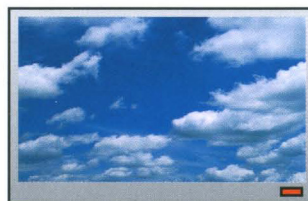

DENON SERVICE NETWORK / 服務網絡

- Please consult the outlet where the equipment was purchased.
- Bitte wenden Sie sich an den Händler, bei dem Sie das Produkt gekauft haben.
- SVP veuillez consulter votre revendeur.
- Neemt u alstublieft contact op met het verkooppunt waar u de apparatuur heeft gekocht.
- Por favor consulte en el establecimiento donde compró el equipo.
- Vänligen ta kontakt med butiken där du köpt utrustningen.
- Rivolgetevi al rivenditore che vi ha venduto l'apparecchio.
- Contactez a loja onde comprou o equipamento.
- 請向你購入本機的商號查詢。
- 請向你所購買本機的商行查詢。

Australia	Audio Products Group Pty Ltd. 67 O'Riordan Street Alexandria NSW 2015, PO Box 150, Mascot NSW 1460 Australia Tel: 1300 134 400 Fax: +61 2 9578 0159
Austria	Digital-Professional-Audio Vertriebsges.m.b.H., Seeböckgasse 59, A-1160 Wien Tel: 01-480-1006 Fax: 01-485-7679
Belgium	Transtel-Sabima P.V.B.A. Duboisstraat 48, B-2060 Antwerpen, Belgium Tel: 03-237-3607
Canada	D&M CANADA INC. 5-505 Apple Creek Blvd., Markham, Ontario, L3R 5B1 Tel: 905-475-4085 Fax: 905-475-4159
China	电音数码音响贸易(上海)有限公司 上海市淮海中路887号永新大厦6010室 电话:(021)64372299 传真:(021)64339973 邮编:200020 天龙客户服务热线:021-62949285
Czech republic	EUROSTAR OSTRAVA s.r.o. areal Vodni stavby Praha, budova A2 Dobronicka 635,148 00 Praha 4 Czech Rep. Tel: 261-112-901 Fax: 261-112-904
Denmark	Hifi Klubben A/S Dali Alle 1, 9610 Noerager, Denmark Tel: 45-96 72 10 00 Fax: 45-96 72 10 14
Finland	Soundata Oy Harneentie 157 5th floor 00560 Helsinki Finland Tel: +358-(0)9-4769 3300 Fax: +358-(0)9-4769 3310
France	DENON FRANCE A division of D&M France SAS Tour Ventose, 2 rue des Bourets, 92156 Suresnes Cedex, France Tel:+33(0)1-41-383230 Fax: +33(0)1-41-380110
Germany	DENON DEUTSCHLAND A division of D&M Germany GmbH An der Landwehr 19, D-41334 Nettetal, Germany Tel: +49(0)2157-1208-0 Fax: +49(0)2157-1208-10
Greece	KINOTECHNIKI LTD. 14, PYRGOU STR. 166 75, GLYFADA ATHENS Tel: +30 210 960 1071 Fax: +30 210 960 1072
Hong Kong	D&M Sales and Marketing (H.K.) Ltd. Unit 501, Ocean Centre, Harbour City, 5 Canton Road, Tsimshatsui, Kowloon, Hong Kong Tel: 852-2516-5864 Fax: 852-2516-5940
Hungary	香港九龍尖沙咀廣東道5號海港城海洋中心5樓501室 電話:852-2516-5864 傳真:852-2516-5940
Iceland	A.I.D.A. Audio Kft. 1112 Budapest Olt u. 37. Hungary Tel: 01-248-2030 Fax: 01-248-2039
India	Einar Farestveit & co hf., Borgartun 28, P.Box 5440, 125 Reykjavik. Tel: +354 5207900 Fax: +354 5207910
Indonesia	Pro FX Dynamic House. 64, Church Street, Bangalore-560 001, India Tel: +91-80-5768-6722 Fax: +91-80-2559-4298
Israel	PT Autoaccindo Jaya. Cideng Barat No. 7 Jakarta, Indonesia Tel: +62-21-633-2730 Fax: +62-21-632-2886
Italy	Newpan Ltd. 14 Rosansky st. Rishon Lezion 75706, Israel. Tel: +972-3-953-5900 Fax: +972-3-961-6193
Korea	Audiodelta S.r.l.19 Via Pietro Calvi 20129 Milano Italy Tel: 39-02-5411-6008 / 39-02-5412-8253 Fax: 39-02-5412-0258
	D&M Sales and Marketing Korea Ltd. Chung Jin B/D., 10F, 53-5, Wonhyoro 3 Ga, Yongsan-Gu, Seoul, 140-719, Korea Tel: 02-715-9041 Fax: 02-715-9040
Malaysia	Wo Kee Hong Trading Sdn Bhd. 2nd Floor, (Left Wing), Bangunan Infinite Centre, Lot 1, Jalan 13/6, 46200 Petaling Jaya, Selangor Darul Ehsan, Malaysia Tel: 03-7954-8088 Fax: 03-7954-7088
Mexico	Labrador, S.A. de C.V. Callejon del Naranjo 35, Naucalpan, 53560, Edo. Mex., Mexico Tel: 52-5359-5161 Fax: 52-5357-1775
Netherlands	Penhold B.V. Poppenbouwing 58, NL-4191 NZ Geldermalsen, Netherland Tel: 31-345-588 080 Fax: 31-345-588 085
New Zealand	Avalon Pacific Marketing Limited. 15c Vestey Drive, Mt Wellington, Auckland, New Zealand. PO Box 11 631 Ellerslie, Auckland, New Zealand Tel: +64-9-573-5933 Fax: +64-9-573-3720
Norway	Hi-Fi Klubben Marcus Thranes gate 4-6, 0473 Oslo, Norway Tel: +47 22 80 63 10 Fax: +47 22 80 63 29
Philippines	Lotteworld Audio Video Systems Incorporated CET Building Mezzanine Floor No. 4 Mindanao Avenue, Barangay Bahay Toro, Project 8, Quezon City, Philippines. Tel: +632-929-5334 Fax: +632-929-1343
Poland	HORN DISTRIBUTION S.A. Ulica Kurantow 34, 02-873 Warszawa Poland Tel: +48 22 331 55 33 Fax: +48 22 331 55 00
Portugal	Videoacustica Qta. Do Paizinho-Armazém 5-Estrada De Circunvalação-Apart. 3127 1303 Lisboa Codex Tel: +351 214241770 Fax: +351 214188093
Singapore	ALL (E&E) Service Center Pte Ltd. Machtech Industrial Building, #06-04, No.2, Kallang Pudding Road, Singapore 349307 Tel: 6747-8274 Fax: 6748-9007
Slovakia	BIS AUDIO s.r.o. Dobronivská cesta 1642/6 960 01 Zvolen Tel:045-5400 703 Fax:045-5400 704
South Africa	Mandarin Distributors S.A. 10 Thora Crescent, Wynberg Ext.3 Sandton, P.O.Box 5137, Johannesburg Republic of South Africa Tel: 27-11-444-8445 Fax: 27-11-444-8363
Spain	Gaplasa S.A.AV. Ing. Conde de Torroja, 25, 28022 Madrid Tel: 91-746-00-45 Fax: 91-329-44-57
Sweden	Hi-Fi Klubben Göteborg Skänegatan 25, 41252 Göteborg Tel:031 33 51010 Fax:031 33 51019
Switzerland	KOENIG APPARATE AG, Abteilung Elektronik. Eggbühlstrasse 28, CH-8052 Zürich, Switzerland Tel: 01-306-1626 Fax: 01-306-1690
Taiwan R.O.C.	KOLIN-DENON Entertainment INC. 5F-3, No. 14, Shiwei Street, Sanchung City, Taipei Hsien, 241 Taiwan, R.O.C. 歌林天龍音樂事業股份有限公司 台北縣三重市溪尾街14號5F之3 電話:(02)8287-2618 傳真:(02)8287-1384
	Realise Tech-Service Co., Ltd. 2F, No. 14, Shiwei Street, Sanchung City, Taipei Hsien, 241 Taiwan, R.O.C. 瑞林科技服務股份有限公司 台北縣三重市溪尾街14號2F 電話(代表號):(02)8287-6668 傳真:(02)8287-6272
Thailand	Mahajak Development Co., Ltd. 46 Mahajak Building, Sukhumvit Soi 3 (Nana-Nua) Klongtoey, Wattana, Bangkok Thailand. 10110 Tel: 66-2-256-0020 Fax: 66-2-253-1696
Turkey	Ertekin elektronik tic. ve san. a.s. Galipdede Caddesi No.: 113 Kuledibi-Karaköy / Istanbul, Turkey Tel: +90(212)293-9515 Fax: +90(212)249-3512
U.A.E.	V.V. & SONS L.L.C. Street No-11/B, Road NO-128, Shed No-39 Al Khabisi, Deira, Dubai, U.A.E Tel: +971-4-266-2435, 268-4575 Fax: +971-4-266-2052
Ukraine	Mirs Ltd. Osipova str. 37/Office 1, 65012 Odessa, Ukraine Tel: +380 (482) 305530 Fax: +380 (482) 305555
United Kingdom & Eire	DENON UK A division of D&M Audiovisual Ltd. Moorbridge House, Padbury Oaks, 579 Bath Road, Longford, Middlesex, UB7 0EH, United Kingdom Tel: +44(0)1753-680568 Fax: +44(0)1753-689697
U.S.A.	DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive, Mahwah, NJ 07430-2041 Tel: 800-497-8921 Fax: 888-544-8434
Vietnam	Anh Duy Manufacturing – Trading Co., Ltd. 170 Ung Van Kheim St., Ward 25, Binh Thanh Dist., HCMC, Vietnam Tel: +84 8 898 3424 Fax: +84 8 898 3425

- * If there is no service center in your local area, please contact one of our overseas service centers, listed above, for follow-up service consultation.
- * Ist kein Service-Center in Ihrer Nähe, setzen Sie sich bitte mit einem der hier aufgelisteten Adressen in Verbindung.
- * Si il n'y a pas de station technique proche de chez vous, veuillez contacter nos l'un de nos centres techniques, listés ci-dessous, pour toutes demandes techniques.
- * Als er geen servicecenter bij u in de buurt is, neem dan contact op een een van onze bovengenoemde servicecenters voor ondersteuning.
- * Si no hay un servicio técnico en su zona, por favor contacte con uno de los servicios técnicos centrales, indicados abajo, para realizar un seguimiento de su consult.
- * Om det inte finns någon auktoriserad Denon-verkstad där du bor, kontakta en av våra internationella servicecentra (se ovan).
- * Se non ci sono dei centri assistenza autorizzati nella vostra zona, potete fare riferimento agli altri centri assistenza autorizzati, vedi elenco sopra, per qualsiasi consultazione tecnica.
- * Caso não exista um centro de assistência técnica na sua área, consulte um dos centros acima apresentados
- * 如若當地並無服務中心，請據上表所列本公司海外服務中心查詢售後服務事宜。
- * 若当地无服务中心，请联系上述所列我们的海外服务中心，以便跟踪服务咨询。

DENON
www.denon.com

Denon Brand Company, D&M Holdings Inc.
Printed in China 00D 515 0921 801  611

Cette garantie ne sera honorée qu’au Canada.

DENON®

GARANTIE LIMITÉE

Durée du garantie non-transférable

La garantie de votre produit DENON, distribué et garanti par D&M CANADA INC. prend effet à partir de la date d’achat du consommateur original auprès d’un revendeur officiel D&M CANADA INC. pendant les périodes suivantes.

Catégorie de produit

Table tournante	1	Levée auto	DP-L	4	ANNÉES
	2	Auto complet	DP-F	2	
Syntoniseur, amplificateur intégré			TU, PMA	3	
Préamplificateur, préamplificateur numérique			PRA, AVP, DAP, POA, HA	3	
Amplificateur de puissance, Préamplificateur phono				3	
Décodeur surround numérique			AVD	3	
Serveur / Client de réseau multimédia	1	Excluant le mécanisme du disque dur	NS	3	
	2	Le mécanisme du disque dur	–	1	
Contrôleur A / V, Récepteur A / V, Récepteur AM / FM			AVC, AVR, DRA	2	
Récepteur DVD, Système DVD Home Theater			ADV, S	1	
Lecteur CD, Lecteur DVD			DCD, DCM, DP, DA, DVD, DVM	1	
Magnétocassette, Enregistreur CD, Enregistreur MD			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
Système Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M, DRR-M, S	1	
Haut-parleurs			SC	1	
Sub-woofer			DSW	2	
Systèmes Karaoke			DCG, HMA	1	
Micro			DM-S	2	
Dock de contrôle pour iPod®			ASD	1	
Casque d’écoute			AH-D, AH-C	1	
Cellule phonoelectrice, Accessoires			DL, AU, DM-K, DME	90	JOURS
Télécommande			RC	90	

Apple et iPod sont des marques commerciales d’Apple Computer, Inc., déposées aux Etats-Unis et dans d’autres pays.

Couverture

Cette garantie couvre tous les défauts de matériel ou de fabrication du produit, à l’exception de ceux indiqués ci-après qui conformément selon les termes durant la période de la garantie. Ne sont pas couverts par la garantie: (1) Tout produit qui n’est pas distribué au Canada par D&M CANADA INC. (2) Tout produit qui n’a pas été acheté au Canada auprès d’un revendeur officiel DENON (Note: On peut identifier les revendeurs officiels DENON par leur auto-collant “REVENDEUR OFFICIEL DENON” affiché dans leur magasin. Si vous doutez qu’un revendeur soit officiellement reconnu, contactez D&M CANADA INC. à l’adresse ci-dessous.) (3) Tout produit dont le numéro de série a été effacé, modifié ou enlevé. (4) Dommages dus à la détérioration ou à un fonctionnement défectueux à la suite de: a) accident, acte de la nature, abus, utilisation impropre, négligence, réparation au moyen d’un produit non autorisé, débalé, modification, emploi contraire aux instructions fournies avec le produit, b) réparation ou tentative de réparation par quelqu’un non reconnu par DENON. c) tout envoi du produit (la réclamation doit être présentée au transporteur). (5) Articles sujets à détérioration par l’usage (têtes de magnétophone, cellules phono, pointes de lecture phono, piles, etc.). (6) Vérification périodique qui ne révèle aucun défaut. (7) Utilisation du produit hors du Canada. (8) Bandes magnétiques, disques CD ou DVD endommagés. (9) Utilisation commerciale, industrielle ou professionnelle. (10) Toutes charges d’installation ou de déplacement résultant d’un défaut du produit.

Notre paiement

Si votre produit DENON est reconnu défectueux par DENON durant la période d’application de la garantie après la date d’achat du consommateur, DENON réparera ou, à son choix, remplacera avec un modèle neuf, usagé ou équivalent ce produit défectueux sans frais de pièces ni de main d’œuvre.

Exécution de la garantie

Si votre produit nécessite service, il peut être envoyé à tout atelier de service officiel DENON ou chez D&M CANADA INC. (Si vous doutez que l’atelier de service soit officiellement reconnu, contactez D&M CANADA INC. à l’adresse ci-dessous). Dans tous les autres cas, les procédures suivantes s’appliquent si votre article doit être transporté pour un service sous garantie.

- a. Vous êtes responsable du transport de votre article ou vous devez vous arranger vous-même pour son transport.
- b. Si votre article doit être envoyé, vous devez payer les frais d’envoi initiaux, mais nous payerons les frais de retour si la garantie couvre les réparations.
- c. **LORSQUE VOUS RENVOYEZ VOTRE ARTICLE POUR UN SERVICE SOUS GARANTIE, VOUS DEVEZ JOINDRE UNE COPIE DE LA FACTURE D’ACHAT D’ORIGINE.**
- d. Vous devez inclure également vos nom, adresse, numéro de téléphone de jour, numéros de modèle et de série du produit et une description du problème. Dans le cas d’un lecteur CD ou DVD, joindre un disque que l’appareil n’a pu lire pour test. Il vous sera retourné avec l’article.

CETTE GARANTIE EST VALABLE SEULMENT AU CANADA.

Si votre produit ne requiert aucun service mais que vous avez des questions quant à son fonctionnement, contactez notre département technique dont l’adresse figure ci-dessous.

CETTE GARANTIE EST EXPRESSÉMENT FAITE EN LIEU ET PLACE DE TOUTES LES AUTRES GARANTIES EXPRIMÉES OU SOUS-ENTENDUES* Y COMPRIS, SANS SE LIMITER À CELLES-CI, LES GARANTIES MARCHANDES ET SPÉCIFIQUES POUR UN USAGE PARTICULIER.

NOTRE RESPONSABILITÉ SE LIMITE À LA RÉPARATION OU AU REMPLACEMENT, À NOTRE CHOIX, DE TOUT PRODUIT DÉFECTUEUX ET N’INCLUT EN AUCUN CAS DES DOMMAGES FORTUITS, COMMERCIAUX INDIRECTS NI MATÉRIELS D’AUCUNE SORTE. NOUS NOUS SOMMES PAS RESPONSABLES POUR LA PERTE DE LES PRODUITS ET/OU LES MARCHANDISES ENDOMMAGEES PENDANT LE TRNSPORT DES BIENS.

CERTAINES PROVINCES NE PERMETTENT PAS DE LIMITES QUANT À LA DURÉE D’UNE GARANTIE SOUS-ENTENDUE ET/OU NE PERMETTENT PAS L’EXCLUSION DE DOMMAGES FORTUITS. LES LIMITATIONS ET EXCLUSIONS MENTIONNÉES PLUS HAUT PEUVENT NE PAS S’APPLIQUER À VOTRE CAS.

Cette garantie vous donne des droits légaux spécifiques, mais il se pourrait que vous ayez d’autres droits qui varient d’une province à l’autre. La garantie ne peut être modifiée que par un document signé par un gestionnaire autorisé de D&M Canada.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca

DENON®

LIMITED WARRANTY

(USA / CANADA)

	PAGE
USA (ENGLISH)	2
CANADA (ENGLISH)	3
CANADA (FRENCH)	4

USA		
DENON ELECTRONICS (USA), LLC (a D&M Holdings Company) 100 Corporate Drive Mahwah, NJ 07430-2041 (800) 497-8921 (888) 544-8434 Fax		
DENON REGIONAL SUPER SERVICE CENTERS (Repair only-No parts orders please)		
PYRAMID AUDIO 305 E. Braker Lane Austin, TX 78753-2746 (512) 458-8292 (512) 453-4542 Fax	UNITED RADIO SERVICE 5717 Enterprise Parkway E. Syracuse, NY 13057-2905 (800) 634-8606 (315) 446-8505 Fax	AUDIO SERVICES 544 Central Dr., Suite 101 Virginia Beach, VA 23454-5245 (757) 498-8277 (757) 498-9554 Fax
INNER SOUND 1416 S.E. Morrison Street Portland, OR 97214-2646 (503) 238-1955 (503) 238-1787 Fax	NORMAN’S ELECTRONICS 3653 Clairmont Road Atlanta, GA 30341-4907 (770) 451-5057 (770) 455-8337 Fax	GOLD CROWN ELECTRONICS Victoria Business Park 129 E. Savarona Way Carson, CA 90746-1406 (310) 538-8282 (310) 538-8281 Fax
SERVICE WIDE TECHNOLOGIES 2239 Curtiss Street Downers Grove, IL 60515-4010 (630) 969-7333 (630) 969-7330 Fax	ELECTRONICE EXPRESS 1809 E. Fabyan Parkway West Chicago, IL 60185 (630) 208-4600 (630) 208-4601 Fax	

CANADA
D&M CANADA INC. 5-505 Apple Creek Boulevard Markham Ontario, L3R 5B1 (905) 475-4085 (905) 475-4159 Fax

This warranty will be honored only in the U.S.A

DENON[®]

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by DENON ELECTRONICS (USA). LLC remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED DENON ELECTRONICS (USA). LLC DEALER.

Product Category

A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	YEAR(S)
DVD Receiver, DVD Home Theater System			ADV, S	1	
Digital Surround Decoder			AVD	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Tuner, Integrated Amplifier			TU, PMA	3	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-A, D-F, D-G, D-M, CDR-M, DRR-M, S	1	
Turntable	1	Autolift / Manual	DP-L, DP-M	4	
	2	Full Automatic	DP-F	2	
Speaker			SC	1	
Sub-woofer			DSW	2	
Network Multimedia Server / Client (Hard Disc Only)	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	-	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	
Headphone			AH-D, AH-C	1	
Cartridge			DL	90	DAYS
Remote Controller			RC	90	

iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in the U.S.A. by DENON ELECTRONICS (USA). LLC. (2) Any product which is not purchased in the U.S.A. from an authorized DENON dealer, unless the product is purchased through the U.S.A. Military Exchange Service where the Warranty will be One (1) year for all products listed above except in the case of Cartridges, Accessories, Remote Controller and Headphone which will remain at 90 days. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact DENON as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside the U.S.A. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or DENON ELECTRONICS (if you are uncertain as to whether a service station is DENON authorized, please contact DENON as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service:

- a. You are responsible for transporting your unit or arranging for its transportation.
- b. If shipment of your unit is required:
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- c. WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- d. You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN THE U.S.A. ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in a writing signed by an officer of Denon Electronics USA, LLC.

DENON ELECTRONICS (USA), LLC
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ 07430-2041
(800) 497-8921
www.usa.denon.com

This warranty will be honored only in Canada.

DENON[®]

LIMITED WARRANTY

Length of Non-Transferable Warranty

This warranty on your DENON product which is distributed and warranted by D&M CANADA INC. remains in effect for the following periods from the date of the original consumer purchase from an AUTHORIZED D&M CANADA INC. DEALER.

Product Category

Turntable	1	Autolift	DP-L	4	YEARS
	2	Full Automatic	DP-F	2	
Tuner, Integrated Amplifier			TU, PMA	3	
Pre-Amplifier, Digital Pre-Amplifier Power-Amplifier, Head Amplifier			PRA, AVP, DAP, POA, HA	3	
Digital Surround Decoder			AVD	3	
Network Multimedia Server / Client	1	Excluded Hard Disk Drive Unit	NS	3	
	2	Hard Disk Drive Unit	-	1	
A / V Controller, A / V Receiver, AM / FM Receiver			AVC, AVR, DRA	2	
DVD Receiver, DVD Home Theater System			ADV, S	1	
CD Player, DVD Player			DCD, DCM, DP, DA, DVD, DVM	1	
Tape Recorder, CD Recorder, MD Recorder			DRM, DRR, DRS, DRW, CDR, CDRW, DMD, DTR	1	
System Audio			D (UPA, UTU, UDCM, UDR, USC, USR, UCD, UDRA) D-M, D-A, D-G, CDR-M, DRR-M, S	1	
Speaker			SC	1	
Sub-woofer			DSW	2	
Karaoke System			DCG, HMA	1	
Microphone			DM-S	2	
Control Dock for iPod®			ASD	1	DAYS
Headphone			AH-D, AH-C	1	
Cartridge, Accessories			DL, AU, DM-K, DME	90	
Remote Controller			RC	90	

What is Covered

Except as specified below, this Warranty covers all defects in material and workmanship in this product occurring during the above warranty periods. The following are not covered by the Warranty: (1) Any product which is not distributed in Canada by D&M CANADA INC. (2) Any product which is not purchased in Canada from an authorized DENON dealer. (Note: AUTHORIZED DENON DEALERS can be identified by DENON AUTHORIZED DEALER sticker displayed in the stores. If you are uncertain as to whether a dealer is a DENON AUTHORIZED DEALER, please contact D&M CANADA INC. as listed below). (3) Any product on which the serial number has been defaced, modified or removed. (4) Damaged deterioration or malfunction resulting from: a) Accident, act of nature, abuse, misuse, neglect, unauthorized product repair, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by DENON. c) Any shipment of the product (claim must be presented to carrier). (5) Items subject to wear from normal usage (tape heads, cartridges, stylus, battery, etc.). (6) Periodic check-ups which do not disclose any defect. (7) Use of the product outside Canada. (8) Damaged magnetic tape or CD/DVD discs. (9) Use in industrial, commercial, and/or professional applications. (10) Any installation or removal charges resulting from product failure.

What We Will Pay For

If during the applicable warranty period from the date of original consumer purchase your DENON product is found to be defective by DENON, DENON will repair, or at its option, replace with new, used or equivalent model, such defective product without charge for parts or labor.

How to Obtain Warranty Performance

If your unit ever needs service, it may be taken or shipped to any authorized DENON service station or D&M CANADA INC. (if you are uncertain as to whether a service station is DENON authorized, please contact D&M CANADA INC. as listed below.) In all other cases, the following procedures apply whenever your unit must be transported for warranty service:

- a. You are responsible for transporting your unit or arranging for its transportation.
- b. If shipment of your unit is required:
You must pay the initial shipping charges, but we will pay the return shipping charges if the repairs are covered by the Warranty.
WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- c. WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES SLIP MUST BE ATTACHED.
- d. You should include the following: your name, address, daytime telephone number, model and serial number of the product and a description of the problem. In the case of a CD or DVD Player, please enclose ONE (1) disc that the unit has failed with for test reasons. It will be returned with the unit.

THIS WARRANTY IS VALID IN CANADA ONLY.

If your product does not require service, but you have questions regarding its operation, please contact our Technical Services Department as listed below.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from province to province. This Warranty may not be altered other than in a writing signed by an officer of D&M Canada Inc.

D&M CANADA INC.
5-505 Apple Creek Boulevard
Markham, Ontario
L3R 5B1
(905) 475-4085
www.denon.ca